

PXIS-2650 series
3U 8-Slot Instrument Chassis and Accessories
User Manual

@Copyright 2004 ADLINK Technology Inc.
All Rights Reserved.

Manual Rev. 1.10: March 26, 2004
Part No. 50-17008-101

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.


Trademarks

PXI is registered trademarks of PXI Systems Alliance. Other product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

Table of Contents

Introduction	1
1.1 Unpacking Checklist	2
1.2 Features	2
1.3 OEM options	4
1.3.1 Backplane	4
1.3.2 Power Supply Unit	4
1.3.3 Chassis Color and Logo	5
Installation.....	7
2.1 Power Budget Consideration	7
2.2 Step for Installation	7
2.3 System monitoring	8
2.4 Grounding on the Mounting Holes	9
Backplane Overview.....	11
3.1 Interoperability with CompactPCI	11
3.2 System Controller Slot	11
3.3 Star Trigger Slot	11
3.4 Peripheral Slots	12
3.5 Local Bus	12
3.6 Trigger Bus	13
3.7 System Reference Clock	13
Troubleshooting and Preventative Maintenance.....	15
4.1 Troubleshooting the PXIS-2650 series	15
4.2 Cleaning	16
4.2.1 Interior Cleaning	16
4.2.2 Exterior Cleaning	16
4.3 Temperature Detect	16
4.4 Fan Hot-Swap	16
APPENDIX A Specifications	19
A.1 General	19
A.2 LCD Specifications	22
A.3 APS-925AX PSU Specifications	23
APPENDIX B Backplane Drawing and Pin Assignments	25
B.1 Backplane and LCD Mechanical Drawing	25
B.2 Backplane cBX-3008L Connectors Pin Assignments	27

B.2.1	<i>PXI Connectors Pin Assignments</i>	27
B.2.2	<i>Miscellaneous Connectors Pin Assignments</i>	30
B.3	LCD Connectors Pin Assignment	32
	Safety Instructions	34
	Product Warranty/Service.....	386

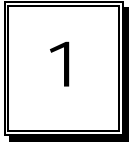

Introduction

ADLINK PXIS-2650 series (PXIS-2650, PXIS-2650T) is an OEM version 19" 3U instrument chassis providing one slot for system controller and 7 slots for PXI/CompactPCI peripherals. Both PXI and CompactPCI modules can be plug into this chassis series. The internal 10MHz reference clock is available on all of the 7 peripheral slots, as well as the star trigger functions, PXI trigger bus, and PXI local bus.

The PXIS-2650 series is equipped with an industrial grade 400W ATX power supply to provide reliable and cost-effective power to the whole system. The status of system power supply, temperature, and cooling fans are monitored by the alarm module assembled in the chassis. Once a failure is detected, the relative LED and buzzer will be actuated. The failure fans can be removed from the front panel and are hot swappable, which effectively reduces MTTR (Mean-Time-To-Repair).

The PXIS-2650 series provides a 6.4" LCD display. The PXIS-2650T provides additional touch panel with the 6.4" LCD display. ADLINK PXD-3710 (3-slot version system controller), PXD-3710F (4-slot version system controller), and PXD-R3000 (Rear I/O Transition Module for PXD-3710/3710F) are designed to fit in the PXIS-2650 series chassis. With its powerful design, the PXIS-2650 series chassis is ideal for high performance and medium size applications.

1.1 Unpacking Checklist

Check the shipping carton for any visible damage. If the shipping carton and contents are damaged, notify the dealer for a replacement. Retain the shipping carton and packing materials for inspection by the dealer. Remember to obtain authorization before returning any products to ADLINK.

Check for the following items in the package. If there are any missing items, contact your dealer:


- The PXIS-2650 series chassis, where
 - PXIS-2650: 8-slot 3U instrument chassis with APS-940XA power supply unit and 6.4"LCD
 - PXIS-2650T: 8-slot 3U instrument chassis with APS-940XA power supply unit, 6.4"LCD, and touch panel
- This User Manual
- Power Cord

Note: The package of the PXI-2650 series OEM version (non-standard configuration, functionality, or package) may vary according to the custom requests. The assigned controller or peripheral modules may be pre-installed and shipped with the chassis. Please check with the dealer for more options.

1.2 Features

- Accepts both 3U PXI and CompactPCI modules
- One system slot and 7 PXI/CompactPCI peripheral slots
- IEEE 1101.10 mechanical packaging compliant
- Filtered, forced-air cooling
- 400W ATX power
- Temperature, voltage, and fan monitoring LED
- 4U high rackmount and benchtop installation
- 6.4" TFT LCD (PXIS-2650) and touch panel (PXIS-2650T)

Figure 1-1 & 1-2 show some of the feature, and components of the PXIS-2650 series chassis. Figure 1-1 shows the front view of the PXIS-2650/2650T. Figure 1-2 shows the rear view of the PXIS-2650/2650T.

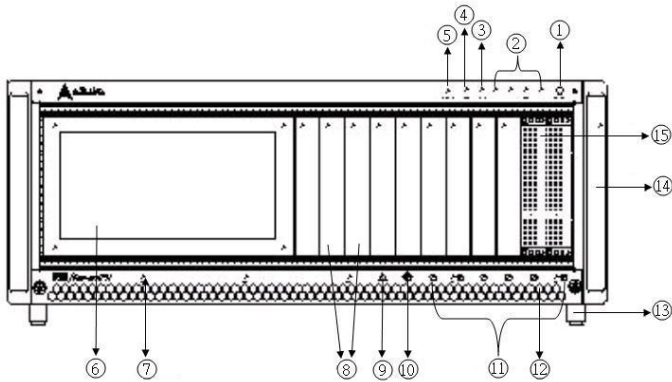

1. Power On/Off Switch	6. 6.4" LCD Panel	11. Peripheral Slots
2. Power LED	7. Fan LED	12. Removable Fan Cover
3. Temp. LED	8. Controller Expansion Slots	13. Removable Feet
4. Alarm LED	9. System Controller Slot	14. Mounting Brackets
5. Alarm RST	10. Star Trigger Slot	15. Backplane Connector

Figure 1-1 Front View of the PXIS-2650/2650T Chassis

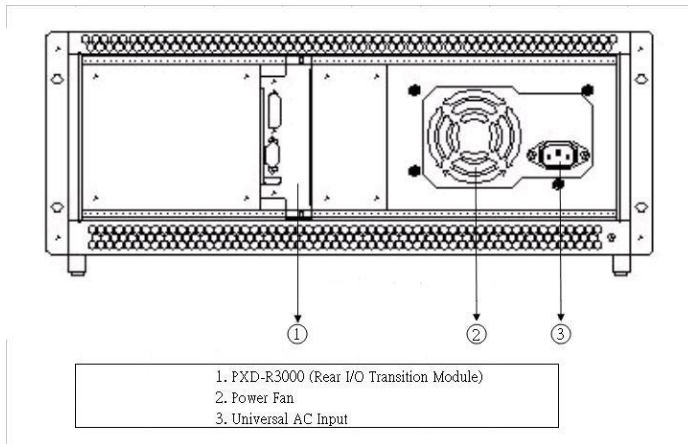


Figure 1-2 Rear View of the PXIS-2650/2650T Chassis

1.3 OEM options

The standard PXIS-2650 series chassis includes two backplanes and a power supply unit in addition to the enclosure metal parts. The following sections depict the standard parts used in the PXIS-2650 series.

1.3.1 Backplane

The PXIS-2650 series has 8-slot PXI backplane cBX-3008L inside. To use redundant power users can choose the following power backplane:

- cBP-3061: Backplane for one 47-pin 3U CompactPCI modular with one ATX DC output power supply unit.
- cBP-3062A: Backplane for one 47-pin 3U CompactPCI modular with two ATX DC output power supply unit.

Please refer to the Appendix for detail specifications.

ADLINK provides customized design and manufacturing service. Please contact an ADLINK sales representative for available backplane configurations.

1.3.2 Power Supply Unit

PXIS-2650 series equips the APS-940XA, a 400 W modular power supply unit that is compliant with PICMG 2.11, the ATX Power Supply Specifications. Please refer to Appendix A.3 for detail specifications.

Various models that accommodate different AC or DC input are available.

This makes PXIS-2650 series suitable for wide variety of applications such as telecom signal analysis and transportation computer, which require 24V/48V DC input power supply. Please contact an ADLINK sales representative for available power supply configurations.

1.3.3 Chassis Color and Logo

The standard color of PXI-2650 series is beige. ADLINK provides custom chassis color or paint specific logo for OEM, with minimum order requirement. Please contact us for more details.

2

Installation

The chapter depicts the procedure of installation PXIS-2650 series chassis.

2.1 Power Budget Consideration

Prior to installing any cards into the PXIS-2650 series chassis, please calculate the system power requirement. The power budget for every DC power sources shall also be checked, including +5V, +3.3V, +12V, -12V supply rail. Please refer to Appendix A.3 for the maximum usable power.

2.2 Step for Installation

Follow the step to power on the chassis.

1. Make sure the power switch is in the OFF position.
2. Plug in the AC power cord.
3. Install your system controller. Please check the ejector/injector handle is pushed down. Align the controller edge to the "RED" card guide, sliding in to the rear of the chassis. Push up on the ejector/injector handle to fully inject the card into the chassis. Secure the screws on the module's front panel.
4. Install peripheral modules if necessary.
5. Press the power switch on the front panel to power on the chassis.
6. Check the LED to make sure the power input is ready. There are four green LED indicators (3.3V, 5V, +12V, and -12V). The four LEDs will light when power turn on.
7. Check if the system power starts, the fans under the chassis should become operational as well.

Note: If the chassis does not power on, see Chapter 4, Troubleshooting and Preventative Maintenance.

2.3 System monitoring

There are LEDs on the front panel for system monitoring, including powers, temperature, and fans. Please refer to following for the detail meaning of display status on LEDs.

System Monitoring

- Power LED (Voltage : 3.3V, 5V, +12V, -12V)
 - Color: Green
 - ON while supplied
- Temperature LED
 - Color: Amber
 - ON for normal condition
 - Flashes if exceeds temperature
- Fan LED
 - Color: Green
 - ON while normal fan speed
 - Flashes if abnormal fan speed
- Alarm LED
 - Color: Red
 - ON while normal condition
 - Flashes if alarm occurs

The Alarm Buzzer beeps continuously if any alarm occurs. When the Alarm Buzzer beeps, users can check the LED on the front panel to find out which kind of alarm occurs.

There is a black button labeled Alarm RST near by the Alarm LED on the front panel. When the Alarm LED flashes and the Alarm Buzzer continues beeping, you can push Alarm RST button to stop beeping.

Users can further refer to Chapter 4 for Troubleshooting.

2.4 Grounding on the Mounting Holes

There are two kinds of grounding for the mounting holes of the backplane. The mounting holes labeled as “GND” with “circle soldering mask” connected to the logic ground plane of the backplane. The mounting holes labeled as “FGND” with “square soldering mask” not connected to the ground plane therefore providing isolation between the logic ground and the chassis ground.

The backplane is mounted on the PXIS-2650 series through all mounting holes by default, therefore the chassis ground is shorted to the logic ground. For applications that require isolation between the logic ground and the chassis ground, users can remove the screws on the GND mounting holes.

3

Backplane Overview

3.1 Interoperability with CompactPCI

The PXIS-2650 series backplane cBX-3008L can use both PXI-compatible products and standard CompactPCI products.

The signals on the P1 connector of the backplane meet the requirements of the CompactPCI specification for both the peripheral and system modules.

The PXI-specific signals are located on P2. Only the signals that are reserved or not used in the CompactPCI 64-bit specification are found on PXI-specific signals. Therefore, all modules that meet the requirements of the CompactPCI 64-bit specification will function in the PXIS-2650 series.

3.2 System Controller Slot

The System Controller slot is located at Slot 1 of the chassis as defined by the PXI specification. It has three controller expansion slots, which are used for system controller modules that are wider than one slot. As defined in the PXI specification, these slots allow the controller to expand to the left to prevent the controller from using up peripheral slots.

3.3 Star Trigger Slot

The Star Trigger (ST) slot is spotted at Slot 2. This slot has a dedicated trigger line between itself and Slot 3 to 8 is intended for modules with ST functionality that can provide individual triggers to the peripherals.

3.4 Peripheral Slots

There are 7 peripheral slots including the Star Trigger controller slot.

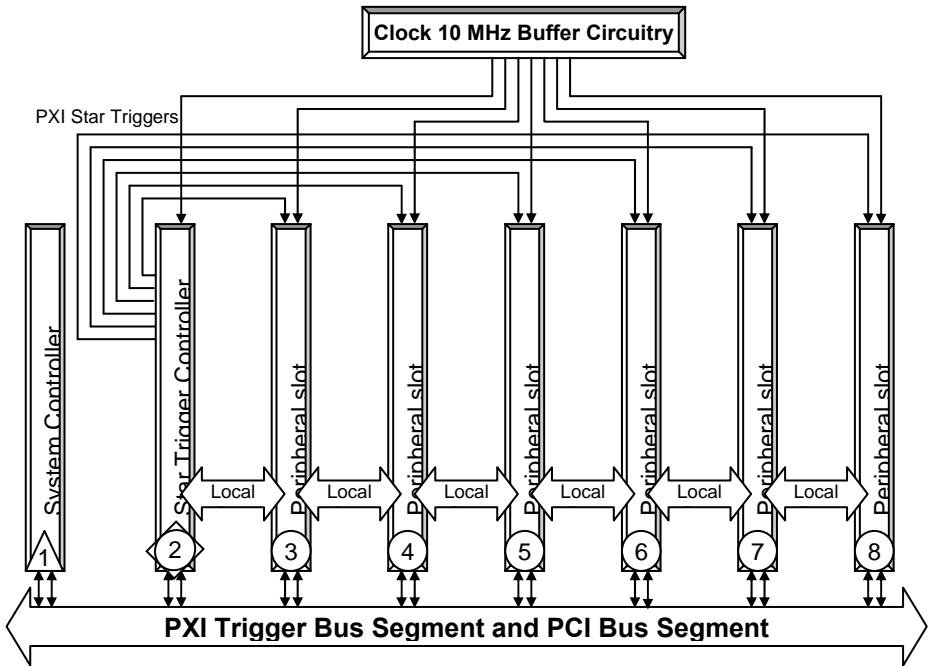


Figure 3.1 PXI Local Bus and Star Trigger Routing

3.5 Local Bus

The local bus of PXI backplane cBX-3008L is a daisy-chained bus that connects each peripheral slot with its adjacent peripheral slots at the left and right. Each local bus is 13 lines wide and can pass analog or digital signals between modules, or provide a high-speed side-band communication path that does not affect the PXI bandwidth.

In accordance with the PXI specification, the local bus connections between all slots except slots 1 and 2.

3.6 Trigger Bus





ADLINK PXIS-2650 series implements the dedicated PXI trigger bus with 8 lines. Users can use these trigger lines to synchronize the operation of several different PXI peripheral modules, or use one module to control carefully timed sequences of operations performed on other modules in the system. Modules can pass triggers to one another through trigger bus, allowing precisely timed responses to asynchronous external events the system is monitoring or controlling.

3.7 System Reference Clock

The PXIS-2650 series supplies the PXI 10MHz system clock signal (PXI_CLK10) independently to every peripheral slot. An independent buffer (having a source impedance matched to the backplane and a skew of less than 1ns between slots) drives the clock signal to each peripheral slot. Users can use this common reference clock signal to synchronize multiple modules in a measurement or control system or drive PXI_CLK10 from an external source through the PXI_CLK10_IN pin on the P2 connector of the star trigger slot.

Users can select the internal or external clock by setting the jumper JP2 and JP3 in the back of the backplane.

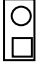JP2 JP3: PXI Reference Clock Control

JP2	JP3	Pin 1-2	Description
		Open JP2 Short JP3	External clock through the PXI_CLK10_IN on star trigger slot
		Short JP2 Open JP3 (default)	Internal 10MHz system clock PXI_CLK10

4

Troubleshooting and Preventative Maintenance

4.1 Troubleshooting the PXIS-2650 series

Please refer to Table 4.1 to troubleshoot the PXIS-2650 series chassis. The table lists possible causes for power failure and recommends ways to correct the problem.

Table 4.1 Troubleshooting

Possible Cause	What to Do
PXIS-2650 series is not connected to power source.	Make sure that the PXIS-2650 series is connected to a live electrical outlet. Try operating another piece of equipment from this outlet.
Power switch is not switched on.	Make sure the power switch is set to the ON position.
Power supply has failed.	Contact ADLINK for repair.
The Alarm Buzzer is beeping	Push Alarm RST button to stop beeping and refer to Chapter 2.3 to find out which alarm occurs.
Temperature LED flashes:	Cool down the PXIS-2650 system under 50°C.
Fan LED flashes:	Refer to Chapter 4.4 for the fan hot-swap replacement.

4.2 Cleaning

Cleaning procedures consist of two parts: interior and exterior cleaning of the chassis. Please refer to the relative user documentation of peripheral modules for cleaning the individual CompactPCI or PXI modules.

Note: Always power-off the chassis and disconnect the power cord before cleaning of servicing the chassis.

4.2.1 Interior Cleaning

Use a dry, low-velocity stream of air for cleaning the interior of the chassis. Clean around components with a soft-bristle brush. If you must use a liquid for minor interior cleaning, use a 75% isopropyl alcohol solution and rinse with deionized water.

4.2.2 Exterior Cleaning

Use a dry lint-free cloth or a soft-bristle brush to clean the exterior surfaces of the chassis. If any dirt remains, moisten a cloth to wipe the exterior surfaces of the chassis in a mild soap solution. Wiping with a cloth moistened with clear water to remove any soap residue. Do not use abrasive compounds on any part of the chassis.

4.3 Temperature Detect

If the system overheats, an Amber Temp LED flashes and a buzzer beeps continuously. There are three values of temperature setting, 50°C, 60°C, and 70°C. The default is 50°C. Contact ADLINK if you need to change the setting.

4.4 Fan Hot-Swap Replacement

There is a LED for each fan for system monitoring. When any one of the fans is defective, the corresponding LED flashes and the alarm buzzer keeps beeping. Please refer to the following for the fan hot-swap replacement.

Fan Hot-Swap Replacement Procedure

1. Press the Alarm RST button on the front panel to stop the beeping.
2. Remove the front panel cover of fans.
3. Pull out the defective fan.
4. Replace with a new fan.
5. Cover back the fans panel cover.



Specifications

A.1 General

PXIS-2650 series accepts modules compliant with CompactPCI, PICMG 2.0 specifications.

Electrical

AC Power Supply (Please refer to A.3 for the detail specifications)

- APS-940 XA, ATX power supply
- Input voltage: 90-132V_{AC} or 190-260V_{AC}, auto ranged
- Input frequency: 50Hz to 60Hz ± 5%
- Output

Maximum usable power: 400W

VDC	Typical
+5V	25.0 – 30.0A
+12V	14A
-5V	1A
-12V	1A
+3.3V	20.0 - 28.0A

System Monitoring

Power LED

Voltage: +3.3V, +5V, +12V, -12V

Color: Green

ON while supplied

Temperature LED

Temperature setting: 50°C, 60°C, 70°C

Color: Amber

ON for normal condition

- FLASH if exceeds temperature
- Fan LED
 - Fan speed monitoring
 - Color: Green
 - ON while normal fan speed
 - FLASH while abnormal fan speed
- Alarm LED
 - Color: Red
 - ON while normal condition
 - FLASH if any alarm occurs
- Alarm Buzzer
 - Beep if any alarm occurs
- Alarm reset button
 - Reset the alarm monitor system

Cooling

- Fans
 - Front-access hot swappable fan trays
 - Five 31CFM fans trays at the bottom of the chassis
 - Fan speed: 2900 ± 300RPM
 - Power: 12 V_{dc} @ 0.17 A each fan
 - Noise: 36dB(A)
 - Air filter: removable from the bottom of the chassis

Physical

- Number of PXI/CompactPCI slots: 8 (1 controller, 7 peripherals)
- Number of controller expansion slots: 3 (left of controller slot)
- Dimensions
 - 258mm x 448.4mm x 177.8 mm (L x W x H, w/o handle)
- Weight
 - 12 KG (PXIS-2650)
 - 12.2 KG (PXIS-2650T)

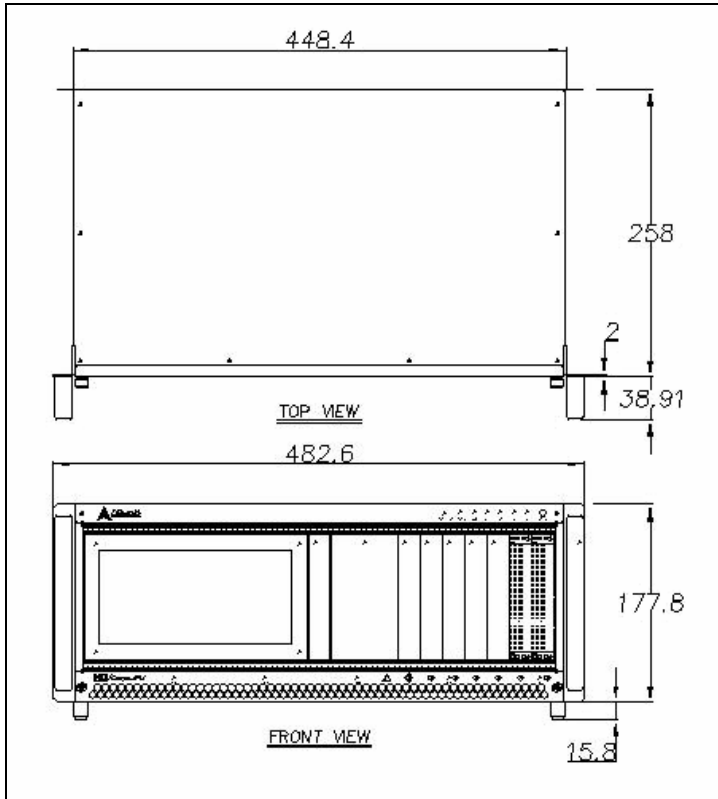


Figure A-1 PXIS-2650 Dimensions

Operating Environment

Ambient temperature range

Model	Temperature
PXIS-2650	0 to 45°C
PXIS-2650T	0 to 45°C

Relative humidity: 10 to 90%, noncondensing

Storage Environment Temperature

Ambient temperature range

Model	Temperature
PXIS-2650	0 to 70°C
PXIS-2650T	0 to 70°C

Relative humidity: 5 to 95%, noncondensing

Backplane

Backplane bare-board material: UL 94V-0 rated

Backplane connectors: Conforms to IEC-917 and IEC 1076-4-101, UL 94V-0 rated

Number of PXI/CompactPCI slots: 8 (1 controller, 7 peripherals)

Shock and Vibration

Shock : 15 G peak-to-peak, 11 ms duration, non-operation

Random Vibration

Operating: 5 to 500 Hz, 0.5 G_{RMS}, each axis

Nonoperating: 5 to 500 Hz, 1.88 G_{RMS}, each axis

Safety and EMC/EMI Compliance

EMC/EMI: CE, FCC Class A

A.2 LCD Specifications

Dimension: 3U height x 10-slot (40HP) width

Screen Size: 6.4 inches (diagonal)

Resolution: 640 x 480 x 18-bit colors (262,144 colors)

Pixel pitch: 0.203mm x 0.203mm

High brightness 300cd/m²

Lamp life time: 15,000 hours @ 25°C

Integrated with back light inverter

Power requirement:

5V @ 6.0W (for LCD panel)

+12V @ 300mA x 2 (for two backlight inverters)

A.3 APS-940XA PSU Specifications

AC Input Characteristics

VOLTAGE: 90 ~ 240 VAC FULL RANGE.

FREQUENCY: 47 ~ 63 HZ.

INPUT CURRENT: 8.0 A (RMS) FOR 115VAC, 4.0 A (RMS) FOR 230VAC.

INRUSH CURRENT: 65A MAX. FOR 115 VAC, 125A MAX. FOR 230 VAC.

AC Input voltage is switching automatically according to AC input voltage. The acceptable input voltage range is as following table.

Voltage	Frequency	Minimum	Maximum	Input Current
115 VAC	47 - 63Hz	90 VAC	130 VAC	8.0A (300W)
230 VAC	47 - 63Hz	180 VAC	260 VAC	4.0A (300W)

DC Output Characteristics

VDC	Minimum	Maximum	Ripple and Noise Max	Load Regulation	Line Regulation
+5 V	3.0 A	35 A	50 mV	±5%	±1%
+12 V	2.0 A	30 A	120 mV	+7%/-5%	±1%
-5 V	0 A	0.8 A	150 mV	±5%	±1%
-12 V	0 A	1.0 A	150 mV	±5%	±1%
+3.3 V	1.0 A	25 A	50 mV	±5%	±1%
+5Vsb	0.1 A	2 A	50 mV	±5%	±1%

REMARK: THE OUTPUT CURRENT OF 5V & 3.3V SHOULD NOT EXCEED 45A.

SPECIFICATION:

Temperature range: Operating 0°C --- 40°C.

Hold up time: 16 ms MINIMUM at full load & normal input voltage.

Dielectric Withstand: Input / Output 1500 VAC for 1 second.

Input to Frame Ground 1500 VAC for 1 second.

Efficiency: 68% Typical.

Power good signal: ON DELAY 100 ms to 500 ms, OFF DELAY 1 ms.

Over load protection: 130 +/- 20%.

Over voltage protection: **+5V → 5.7V ~ 6.5V, 3.3V → 3.9 ~ 4.3V, 12V → 13.6 ~ 15V.**

Short circuit protection: +5V, -5V, +12V, -12V, +3.3V.

EMI noise filter: FCC Class B, CISPR22 Class B.

Safety: UL 1950, CSA 22.2 NO/ 950, TÜV IEC 950.

Remote ON / OFF control. The unit shall accept a logic open collector level which will disable/enable all output voltages (exclude +5V standby), As logic level is low, outputs voltage were enable, as logic level is high, outputs voltage was disable.


3.3V / 5V Remote Sensing.

Cooling: one 80mm ball bearing DC FAN.

Dimension: 140 (D) x150 (W) x 86 (H) mm (PS/2).

Active power factor correction meets IEC-1000-3-2 Class D.

Advance thermal & acoustics control features.

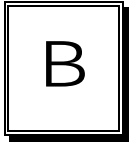

Backplane Drawing and Pin Assignments

B.1 Backplane and LCD Mechanical Drawing

The following figures show the two parts of the backplanes and Mechanical Drawing.

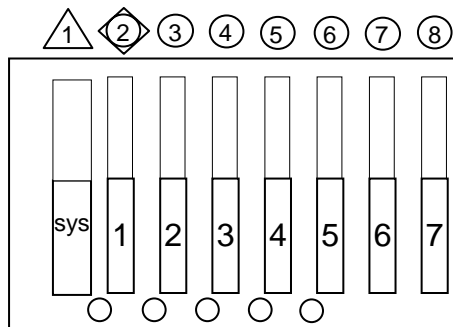


Figure B.1 cBX-3008L front view Drawing

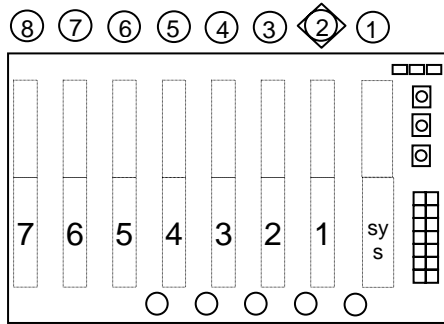


Figure B.2 cBX-3008L rear view Drawing

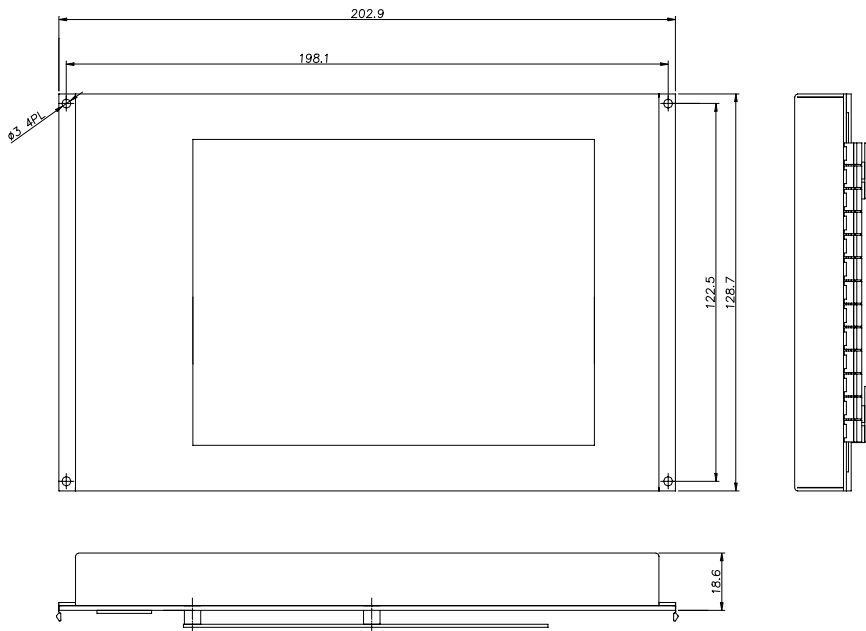


Figure B.3 LCD Mechanical Drawing

B.2 Backplane cBX-3008L Connectors Pin Assignments

B.2.1 PXI Connectors Pin Assignments

System Slot (Slot #1) P1 Pin Assignment

Pin	Z	A	B	C	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	GND	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14	Key						
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	GND	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ# ⁽¹⁾	GND	+3.3V	CLK ⁽¹⁾	AD[31]	GND
5	GND	BRSVP1A5	BRSVP1B5	PCIRST#	GND	GNT# ⁽¹⁾	GND
4	GND	IPMB_PWR	GND	V(I/O)	INTP	INTS	GND
3	GND	INTA# ⁽¹⁾	INTB# ⁽¹⁾	INTC# ⁽¹⁾	+5V	INTD# ⁽¹⁾	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	A	B	C	D	E	F

System Slot (Slot #1) P2 Pin Assignment

Pin	Z	A	B	C	D	E	F
22	GND	PXI_BRSVA22	PXI_BRSVB22	PXI_BRSVC22	PXI_BRSDV22	PXI_BRSEV22	GND
21	GND	CLK6	GND	NC	NC	NC	GND
20	GND	CLK5	GND	NC	GND	NC	GND
19	GND	GND	GND	SMBDATA	SMBCLK	SMBALERT-	GND
18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
17	GND	PXI_TRIG2	GND	PRST#	REQ6#	GNT6#	GND
16	GND	PXI_TRIG1	PXI_TRIG0	DEG#	GND	PXI_TRIG7	GND
15	GND	PXI_BRSVA15	GND	FAL#	REQ5#	GNT5#	GND
14	GND	AD[35]	AD[34]	AD[33]	GND	AD[32]	GND
13	GND	AD[38]	GND	V(I/O)	AD[37]	AD[36]	GND
12	GND	AD[42]	AD[41]	AD[40]	GND	AD[39]	GND
11	GND	AD[45]	GND	V(I/O)	AD[44]	AD[43]	GND
10	GND	AD[49]	AD[48]	AD[47]	GND	AD[46]	GND
9	GND	AD[52]	GND	V(I/O)	AD[51]	AD[50]	GND
8	GND	AD[56]	AD[55]	AD[54]	GND	AD[53]	GND
7	GND	AD[59]	GND	V(I/O)	AD[58]	AD[57]	GND
6	GND	AD[63]	AD[62]	AD[61]	GND	AD[60]	GND
5	GND	C/BE[5]#	GND	V(I/O)	C/BE[4]#	PAR64	GND
4	GND	V(I/O)	PXI_BRSVB4	C/BE[7]#	GND	C/BE[6]#	GND
3	GND	CLK4	GND	GNT3#	REQ4#	GNT4#	GND

2	GND	CLK2	CLK3	GND (SYS#)	GNT2#	REQ3#	GND
1	GND	CLK1	GND	REQ1#	GNT1#	REQ2#	GND
Pin	Z	A	B	C	D	E	F

Star Trigger Slot (Slot #2) P1 Pin Assignment

Pin	Z	A	B	C	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14	Key						
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL ⁽¹⁾	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ# ⁽¹⁾	GND	+3.3V	CLK ⁽¹⁾	AD[31]	GND
5	GND	BRSVP1A5	BRSVP1B5	PCIRST#	GND	GNT# ⁽¹⁾	GND
4	GND	IPMB_PWR	GND	V(I/O)	INTP	INTS	GND
3	GND	INTA# ⁽¹⁾	INTB# ⁽¹⁾	INTC# ⁽¹⁾	+5V	INTD# ⁽¹⁾	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	A	B	C	D	E	F

Star Trigger Slot (Slot #2) P2 Pin Assignment

Pin	Z	A	B	C	D	E	F
22	GND	PXI_BRSVA22	PXI_BRSVB22	PXI_BR SVC22	PXI_BRSVD22	PXI_BRSVE22	GND
21	GND	PXI_LBR0	GND	PXI_LBR1	PXI_LBR2	PXI_LBR3	GND
20	GND	PXI_LBR4	PXI_LBR5	PXI_STAR0 ⁽²⁾	GND	PXI_STAR1 ⁽²⁾	GND
19	GND	PXI_STAR2 ⁽²⁾	GND	PXI_STAR3 ⁽²⁾	PXI_STAR4	PXI_STAR5	GND
18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
17	GND	PXI_TRIG2	GND	N/C	PXI_CLK10_IN	PXI_CLK10	GND
16	GND	PXI_TRIG1	PXI_TRIG0	N/C	GND	PXI_TRIG7	GND
15	GND	PXI_BRSVA15	GND	N/C	PXI_STAR6	PXI_LBR6	GND
14	GND	AD[35]	AD[34]	AD[33]	GND	AD[32]	GND
13	GND	AD[38]	GND	V(I/O)	AD[37]	AD[36]	GND
12	GND	AD[42]	AD[41]	AD[40]	GND	AD[39]	GND
11	GND	AD[45]	GND	V(I/O)	AD[44]	AD[43]	GND
10	GND	AD[49]	AD[48]	AD[47]	GND	AD[46]	GND
9	GND	AD[52]	GND	V(I/O)	AD[51]	AD[50]	GND
8	GND	AD[56]	AD[55]	AD[54]	GND	AD[53]	GND
7	GND	AD[59]	GND	V(I/O)	AD[58]	AD[57]	GND
6	GND	AD[63]	AD[62]	AD[61]	GND	AD[60]	GND
5	GND	C/BE[5]#	GND	V(I/O)	C/BE[4]#	PAR64	GND
4	GND	V(I/O)	PXI_BRSVB4	C/BE[7]#	GND	C/BE[6]#	GND

3	GND	PXI_LBR7	GND	PXI_LBR8	PXI_LBR9	PXI_LBR10	GND
2	GND	PXI_LBR11	PXI_LBR12	N.C (SYS#)	PXI_STAR7	PXI_STAR8	GND
1	GND	PXI_STAR9	GND	PXI_STAR10	PXI_STAR11	PXI_STAR12	GND
Pin	Z	A	B	C	D	E	F

General Peripheral Slot (Slot #3~#6) P1 Pin Assignment

Pin	Z	A	B	C	D	E	F
25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
18	GND	SERR#	GND	+3.3V	PAR	C/BE[1]#	GND
17	GND	+3.3V	IPMB_SCL	IPMB_SDA	GND	PERR#	GND
16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
12-14	Key						
11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
9	GND	C/BE[3]#	IDSEL ⁽¹⁾	AD[23]	GND	AD[22]	GND
8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
6	GND	REQ# ⁽¹⁾	GND	+3.3V	CLK ⁽¹⁾	AD[31]	GND
5	GND	BRSVP1A5	BRSVP1B5	PCIRST#	GND	GNT# ⁽¹⁾	GND
4	GND	IPMB_PWR	GND	V(I/O)	INTP	INTS	GND
3	GND	INTA# ⁽¹⁾	INTB# ⁽¹⁾	INTC# ⁽¹⁾	+5V	INTD# ⁽¹⁾	GND
2	GND	TCK	+5V	TMS	TDO	TDI	GND
1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	A	B	C	D	E	F

General Peripheral Slot (Slot #3~#6) P2 Pin Assignment

Pin	Z	A	B	C	D	E	F
22	GND	PXI_BRSVA22	PXI_BRSVB22	PXI_BR SVC22	PXI_BR SVD22	PXI_BR SVE22	GND
21	GND	PXI_LBR0	GND	PXI_LBR1	PXI_LBR2	PXI_LBR3	GND
20	GND	PXI_LBR4	PXI_LBR5	PXI_LBL0	GND	PXI_LBL1	GND
19	GND	PXI_LBL2	GND	PXI_LBL3	PXI_LBL4	PXI_LBL5	GND
18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
17	GND	PXI_TRIG2	GND	N/C	PXI_STAR ⁽²⁾	PXI_CLK10	GND
16	GND	PXI_TRIG1	PXI_TRIG0	N/C	GND	PXI_TRIG7	GND
15	GND	PXI_BRSVA15	GND	N/C	PXI_LBL6	PXI_LBR6	GND
14	GND	AD[35]	AD[34]	AD[33]	GND	AD[32]	GND
13	GND	AD[38]	GND	V(I/O)	AD[37]	AD[36]	GND
12	GND	AD[42]	AD[41]	AD[40]	GND	AD[39]	GND
11	GND	AD[45]	GND	V(I/O)	AD[44]	AD[43]	GND
10	GND	AD[49]	AD[48]	AD[47]	GND	AD[46]	GND
9	GND	AD[52]	GND	V(I/O)	AD[51]	AD[50]	GND
8	GND	AD[56]	AD[55]	AD[54]	GND	AD[53]	GND
7	GND	AD[59]	GND	V(I/O)	AD[58]	AD[57]	GND
6	GND	AD[63]	AD[62]	AD[61]	GND	AD[60]	GND
5	GND	C/BE[5]#	GND	V(I/O)	C/BE[4]#	PAR64	GND

4	GND	V(I/O)	PXI_BRSVB4	C/BE[7]#	GND	C/BE[6]#	GND
3	GND	PXI_LBR7	GND	PXI_LBR8	PXI_LBR9	PXI_LBR10	GND
2	GND	PXI_LBR11	PXI_LBR12	N/C (SYS#)	PXI_LBL7	PXI_LBL8	GND
1	GND	PXI_LBL9	GND	PXI_LBL10	PXI_LBL11	PXI_LBL12	GND
Pin	Z	A	B	C	D	E	F

Note 1: Please refer the following table for the routing of the Bus Mastering (REQ/GNT), IDSEL, PCI CLK, and Interrupt signals.

	IDSEL	REQ# /GNT#	PCI CLK	PXI P1 Pin A3	PXI P1 Pin B3	PXI P1 Pin C3	PXI P1 Pin E3
Slot 1(SYS)	-	-	-	INTA#	INTB#	INTC#	INTD#
Slot 2	AD31	0	6	INTD#	INTA#	INTB#	INTC#
Slot 3	AD30	1	5	INTC#	INTD#	INTA#	INTB#
Slot 4	AD29	2	1	INTB#	INTC#	INTD#	INTA#
Slot 5	AD28	3	2	INTA#	INTB#	INTC#	INTD#
Slot 6	AD27	4	3	INTD#	INTA#	INTB#	INTC#
Slot 7	AD26	5	4	INTC#	INTD#	INTA#	INTB#
Slot 8	AD25	6	0	INTB#	INTC#	INTB#	INTA#

Note 2: Please refer the following table for the routing of the PXI_STAR addressing signals from the trigger slot to peripheral slots.

Physical Slot Number	PXI_STAR (P2-D17)
Slot 2 (Star Trigger Slot)	PXI_STAR0 ~ PXI_STAR5
Slot 3	PXI_STAR0
Slot 4	PXI_STAR1
Slot 5	PXI_STAR2
Slot 6	PXI_STAR3
Slot 7	PXI_STAR4
Slot 8	PXI_STAR5

B.2.2 Miscellaneous Connectors Pin Assignments

CN3: ATX-like DC Power input connectors

Signal Name	Pin #	Pin #	Signal Name
V2SENSE	1	11	V2 (+3.3V)
V2 (+3.3V)	2	12	V4 (-12V)
GND	3	13	GND
V1 (+5V)	4	14	INH#
GND	5	15	GND
V1 (+5V)	6	16	SRTN
GND	7	17	GND
FAL#1	8*	18*	V3SENSE
DEG#1	9*	19	V1SENSE
V3 (+12V)	10	20	V1 (+5V)

Note 1: Pin #8, #9, and #18 are not standard ATX power definition.

General Purpose screw terminals



Position	Signal Name
J4	+3.3V
J6	V(I/O)
J7	+5V

Note that the V(I/O) must be shorted to either +3.3V or +5V. The default factory setting is to short V(I/O) to +5V.

J3 INH#: DC power inhibit signal

J3	Pin #	Signal Name
	1	INH#
	2	GND

J2 PRST#: System reset signal

J2	Pin #	Signal Name
	1	RST#
	2	GND

J1 FAL#: Power supply fail input

J1	Pin #	Signal Name
	1	FAL#
	2	GND

J8: Connector for LED power status

J8	Name	Pin #	Pin #	Name
	GND	8	7	+3.3V
	GND	6	5	+5V
	GND	4	3	-12V
	GND	2	1	+12V



J5: SMB (system managing bus) connector

J5	Pin #	Name
	1	SMCLK
	2	GND
	3	SMDATA





	4	V(I/O)
	5	ALERT

The SMB is connected to the P2 of the system slot.

JP1: PXI Bus Speed Control

	Pin 1-2	Description
	Short	Short M66EN to ground to force PCI bus run 33M Hz
	Open (default)	PCI bus speed defined by M66EN on the PXI bus

JP2 JP3: PXI 10MHz Reference Clock Control

JP2	JP3	Pin 1-2	Description
		Open JP2 Short JP3	External clock through the PXI_CLK10_IN on star trigger slot
		Short JP2 Open JP3 (default)	Internal 10MHz system clock PXI_CLK10

B.3 LCD Connectors Pin Assignment

LCD Signal Connector

Signal	Pin #	Pin #	Signal
NC	1	2	NC
GND	3	4	GND
VDD	5	6	VDD
NC	7	8	NC
P0	9	10	P1
P2	11	12	P3
P4	13	14	P5
NC	15	16	NC
P8	17	18	P9
P10	19	20	P11
P12	21	22	P13
NC	23	24	NC
P16	25	26	P17
P18 (N/C)	27	28	P19 (N/C)

P20 (N/C)	29	30	P21 (N/C)
NC	31	32	NC
GND	33	34	GND
CLK	35	36	FLM
M	37	38	LP
GND	39	40	NC
NC	41	42	NC
VDD	43	44	NC

Power and control connector for the backlight inverter

Pin #	Name	Color
1	+12V	Yellow
2	Power On (default connect to +5V)	Red
3	GND	Black
4	VR (default connect to GND)	Black

SAFETY INSTRUCTIONS

1. Please read these safety instructions carefully.
2. Please keep this User's Manual for later reference.
3. One AC Inlet provided and service as Disconnect Devices, disconnect the equipment from the AC outlet use the AC Inlet before servicing or clearing. Use moisture sheet or cloth for cleaning.
4. For pluggable equipment, that the socket-outlet shall be installed near the equipment and shall be easily accessible.
5. Please keep this equipment from humidity.
6. Lay this equipment on a reliable surface when install. A drop or fall could cause injury.
7. Make sure the voltage of the power source when connect the equipment to the power outlet.
8. Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
9. All cautions and warnings on the equipment should be noted.
10. If the equipment is not use for long time, disconnect the equipment from mains to avoid being damaged by transient overvoltage.
11. Never pour any liquid into opening, this could cause fire or electrical shock.
12. Never open the equipment. For safety reason, the equipment should only be opened by qualified service personnel.
13. If one of the following situations arises, get the equipment checked by a service personnel:
 - a. The Power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment has not work well or you can not get it work according to user's manual.
 - e. The equipment has dropped and damaged.
 - f. If the equipment has obvious sign of breakage.

1. The equipment can be operated at an ambient temperature of **50°C**.
2. Lithium Battery provided (real time clock battery), contact ADLINK for replacing,

CAUTION – Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully:

1. Before using ADLINK's products please read the user manual and follow the instructions exactly.
2. When sending in damaged products for repair, please attach an RMA application form.
3. All ADLINK products come with a two-year guarantee, repaired free of charge.
 - The warranty period starts from the product's shipment date from ADLINK's factory.
 - Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
 - End users requiring maintenance services should contact their local dealers. Local warranty conditions will depend on local dealers.
4. This warranty will not cover repair costs due to:
 - Damage caused by not following instructions.
 - Damage caused by carelessness on the users' part during product transportation.
 - Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
 - Damage caused by unsuitable storage environments (i.e. high temperatures, high humidity, or volatile chemicals).
 - Damage caused by leakage of battery fluid.
 - Damage from improper repair by unauthorized technicians.
 - Products with altered and/or damaged serial numbers.
 - Other categories not protected under our guarantees.
5. Customers are responsible for shipping costs to transport damaged products to our company or sales office.
6. To ensure the speed and quality of product repair, please use the RMA form attached in next page or you can download the form from our company website: <http://www.adlinktech.com/news/Company/RMA.doc>. Damaged products with attached RMA forms receive priority.

For further questions, please contact our FAE staff.

ADLINK: service@adlinktech.com

Note:

1. Please give specific details of the defect. Do not give general reasons like, "not working, error, dead, etc. "
2. Please ship prepaid by Speed post (EMS) (If items are shipped via freight forwarder, we will not cover the extra handling charges)
3. Please show a value of US\$10 for each item and include the RMA number. Also, be sure to write on shipping invoice, "for repair, no commercial value" for customs. (Please note that the amount must be under US\$200 for customs purposes only)
4. Enclose this form (page 1 & 2) in the package for fast identification.
5. Please sign this form (page 1 & 2) and fax it back to us for confirmation within three days. Otherwise, we will process your request according the stated on the RMA Request Form.
6. We will charge for items no longer under warranty.

Please let us know your preferred shipping method for returning reworked items to you.

- Ship with your next shipment
- Ship separately by air parcel
(Note: we do not accept liability for items shipped by air parcel)
- Other _____

ADLINK Technology Inc.		Accepted & Confirmed by