



**ADLINK**  
TECHNOLOGY INC.

# PXI-3920/3910

3U PXI System Controller

## User's Manual



**Manual Revision:** 2.00

**Revision Date:** January 29, 2008

**Part No:** 50-17028-2000



Recycled Paper

**Advance Technologies; Automate the World.**

## Revision History

Revision	Release Date	Description of Change(s)
2.00	2008/01/29	Document Created Initial Release

# Preface

## Copyright 2008 ADLINK TECHNOLOGY INC.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

## Disclaimer

The information in this document is subject to change without prior notice in order to improve reliability, design, and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

## Trademarks

PC, PS/2, and VGA are registered trademarks of International Business Machines Corp. Borland®, Borland® C, C++ Builder®, and Delphi® are registered trademarks of the Borland Software Corporation. CompactFlash® is a registered trademark of Sandisk® Corporation. Intel®, Celeron®, Core™, and Pentium® are registered trademarks of Intel Corporation. Linux® is a registered trademark of Linus Torvalds. LXI® is a registered trademark of the LXI Consortium. Microsoft®, Visual Basic®, Visual C#®, Visual C++®, Visual Studio®, Windows® 2000, Windows® Server® 2003, Windows® XP, and Windows® Vista are registered trademarks of Microsoft Corporation. National Instruments Logo and brand name are trademarks of National Instruments Corporation. PCI Express®, PCIe®, and PCI-X® are registered trademarks of the Peripheral Component Interconnect Special Interest Group (PCI-SIG). Phillips is a registered trademark of Koninklijke Philips Electronics N.V. Phoenix Award™ is a trademark of Phoenix Technologies Ltd. PXI™ is a trademark

of the PXI systems Alliance. Realtek and ALC260 are trademarks of Realtek Semiconductor Corp. Yukon® is a registered trademark of Marvell Corporation.

Product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective companies.

## Conventions

Take note of the following conventions used throughout this manual to make sure that users perform certain tasks and instructions properly.



NOTE:

Additional information, aids, and tips that help users perform tasks.

---



CAUTION:

Information to prevent **minor** physical injury, component damage, data loss, and/or program corruption when trying to complete a task.

---



WARNING:

Information to prevent **serious** physical injury, component damage, data loss, and/or program corruption when trying to complete a specific task.

---

## Getting Service

Contact us should you require any service or assistance.

### **ADLINK TECHNOLOGY INC. (HEADQUARTERS)**

Web Site: <http://www.adlinktech.com>  
Sales & Service: [service@adlinktech.com](mailto:service@adlinktech.com)  
Telephone No.: +886-2-8226-5877  
Fax No.: +886-2-8226-5717  
Mailing Address: 9F No. 166 Jian Yi Road, Chungho City,  
Taipei 235, Taiwan, ROC

### **ADLINK TECHNOLOGY AMERICA INC.**

Sales & Service: [info@adlinktech.com](mailto:info@adlinktech.com)  
Toll-Free: +1-866-4 ADLINK  
Fax No.: +1-949-727-2099  
Mailing Address: 8900 Research Drive, Irvine,  
CA 92618, USA

### **ADLINK TECHNOLOGY CO. LTD. (BEIJING)**

Sales & Service: [market@adlinktech.com](mailto:market@adlinktech.com)  
Telephone No.: +86-10-5885-8666  
Fax No.: +86-10-5885-8625  
Mailing Address: Rm. 801, Power Creative E, No. 1, B/D  
Shang Di East Rd.  
Beijing, 100085 China

### **ADLINK TECHNOLOGY CO. LTD. (SHANGHAI)**

Sales & Service: [market@adlinktech.com](mailto:market@adlinktech.com)  
Telephone No.: +86-21-6495-5210  
Fax No.: +86-21-5450-0414  
Mailing Address: 4F, Bldg. 39, No.333 Qinjiang Road,  
Cao He Jing High-Tech Park  
Shanghai, 200233 China

### **ADLINK TECHNOLOGY CO. LTD. (SHENZHEN)**

Sales & Service: [market@adlinktech.com](mailto:market@adlinktech.com)  
Telephone No.: +86-755-2643-4858  
Fax No.: +86-755-2664-6353  
Mailing Address: 2F, C Block, Bld. A1,  
Cyber-Tech Zone, Gao Xin Ave. Sec 7,  
High-Tech Industrial Park S.,  
Shenzhen, 518054 China

### **ADLINK TECHNOLOGY INC. (EUROPE)**

Sales & Service: emea@adlinktech.com  
Telephone No.: +49-211-495-5552  
Fax No.: +49-211-495-5557  
Mailing Address: Nord Carree 3, 40477  
Düsseldorf, Germany

### **ADLINK TECHNOLOGY INC. (INDIA)**

Sales & Service: india@adlinktech.com  
Telephone No.: +91-80-6560-5817  
Fax No.: +91-80-2244-3548  
Mailing Address: No. 1357, Ground Floor, "Anupama",  
Aurobindo Marg JP Nagar (Ph-1)  
Bangalore, Karnataka 560078, India

### **ADLINK TECHNOLOGY JAPAN CORP.**

Sales & Service japan@adlinktech.com  
Telephone No. +81-3-4455-3722  
Fax No. +81-3-5333-6040  
Mailing Address Asahiseimei Hatagaya Bld. 8Fl. 1-1-2  
Hatagaya Shibuya-ku, Tokyo, Japan

### **ADLINK TECHNOLOGY INC. (SOUTH KOREA)**

Sales & Service: korea@adlinktech.com  
Telephone No.: +82-2-2057-0565  
Fax No.: +82-2-2057-0563  
Mailing Address: #402, Dongsung B/D, 60-12,  
Nonhyeon-dong Gangnam-gu,  
Seoul, 135-010, South Korea

### **ADLINK TECHNOLOGY SINGAPORE PTE. LTD.**

Sales & Service: singapore@adlinktech.com  
Telephone No.: +65-6844-2261  
Fax No.: +65-6844-2263  
Mailing Address: 84 Genting Lane #07-02A,  
Cityneon Design Center,  
Singapore 349584

# Table of Contents

<b>PXI-3920/3910</b> .....	<b>i</b>
<b>Revision History</b> .....	<b>ii</b>
<b>Preface</b> .....	<b>iii</b>
Copyright 2008 ADLINK TECHNOLOGY INC. ....	iii
Disclaimer .....	iii
Trademarks .....	iii
Conventions .....	iv
Getting Service .....	v
<b>Table of Contents</b> .....	<b>vii</b>
<b>List of Figures</b> .....	<b>xi</b>
<b>List of Tables</b> .....	<b>xiii</b>
<b>1 Introduction</b> .....	<b>1</b>
1.1 Features.....	2
<b>2 Hardware Information</b> .....	<b>3</b>
2.1 PXI-3920/3910 Block Diagram .....	3
2.2 PXI-3920/3910 Specifications.....	4
2.3 I/O Connectors & Pin Assignments .....	6
2.4 Faceplate Connectors/Indicators .....	7
2.4.1 PXI Trigger Connector .....	8
2.4.2 DVI-I Connector.....	9
2.4.3 GPIB Connector.....	10
2.4.4 Reset Button .....	11
2.4.5 LED Indicators .....	11
2.4.6 COM Ports .....	12
2.4.7 USB 2.0 Ports .....	13
2.4.8 Gigabit Ethernet Port .....	14
2.4.9 High Definition Audio Ports.....	15
2.5 On-board Connectors Layout .....	16
2.5.1 CompactFlash Socket.....	17
2.5.2 SATA Port.....	18
2.5.3 PXI J1 .....	19

2.5.4	PXI J2 .....	20
2.6	Jumper Layout .....	21
2.6.1	Clear CMOS (JP9) .....	22
2.6.2	COM1/COM2 Mode Settings (JP1/JP2/JP3/JP4/JP5/JP6) .....	23
<b>3</b>	<b>Getting Started .....</b>	<b>25</b>
3.1	Installation Environment .....	25
3.1.1	Compatible Chassis .....	26
3.2	Package Contents .....	27
3.3	Installing PXI-3920/3910 .....	28
3.4	Hard Drive Replacement .....	30
3.5	CompactFlash card installation .....	32
3.6	BIOS Configuration .....	33
3.7	Operating System Installation .....	33
3.8	Setting PXI-3920/3910 Boot Devices .....	35
3.9	Using PXI-3920/3910 with PXI-2558T-B Chassis .....	38
<b>4</b>	<b>Driver Installation .....</b>	<b>39</b>
4.1	Chipset Drivers .....	39
4.2	Graphics Driver .....	41
4.3	Ethernet Drivers .....	42
4.4	Audio Drivers .....	43
	For Windows 2000 and XP users: .....	43
	For Windows Vista users: .....	44
4.5	GPIB Driver .....	44
4.6	PXI Trigger Driver .....	45
4.7	WDT Driver .....	45
<b>5</b>	<b>Appendix A: PXI Trigger I/O Function Reference .....</b>	<b>47</b>
A.1	Data Types .....	47
A.2	Function .....	48
<b>6</b>	<b>Appendix B: Watchdog Timer Function Reference .....</b>	<b>55</b>
B.1	Function .....	56
	<b>Important Safety Instructions .....</b>	<b>61</b>
	<b>Warranty Policy .....</b>	<b>63</b>



## List of Figures

Figure 2-1: PXI-3920/3910 Bloc Diagram .....	3
Figure 2-2: PXI-3920/3910 Faceplate .....	7
Figure 2-3: PXI Trigger & Pin Assignments .....	8
Figure 2-4: DVI Connector & Pin Assignments .....	9
Figure 2-5: GPIB Connector & Pin Assignments .....	10
Figure 2-6: COM Ports & Pin Assignments.....	12
Figure 2-7: USB 2.0 Ports & Pin Assignments.....	13
Figure 2-8: USB-to-PS/2 Cable.....	13
Figure 2-9: Gigabit Ethernet Port & Pin Assignments.....	14
Figure 2-10: High Definition Audio Ports.....	15
Figure 2-11: PXI-3920/3910 Board Layout .....	16
Figure 2-12: CompactFlash Socket & Pin Assignments .....	17
Figure 2-13: SATA Gen. 1 Port & Pin Assignments.....	18
Figure 2-14: J1 Connector & Pin Assignments .....	19
Figure 2-15: J2 Connector & Pin Assignments .....	20
Figure 2-16: PXI-3920/3910 Jumper Layout.....	21
Figure 2-17: JP9 (Clear CMOS) Settings.....	22
Figure 2-18: COM1 & COM2 JP1 through JP6 Settings.....	23

This page intentionally left blank.

## List of Tables

Table 2-1: Peripheral Connectivity.....	6
Table 2-2: LED Indicators .....	11
Table 2-3: Gigabit Ethernet LED Status Description.....	15

This page intentionally left blank.

# 1 Introduction

The PXI-3920 and PXI-3910 are ADLINK's next generation 3U PXI system controllers designed to be the core of hybrid PXI-based testing systems. The PXI-3920 incorporates an Intel Pentium M 760 2.0 GHz processor and 915GME chipset to provide superior computing performance; while the PXI-3910 incorporates an Intel Celeron M 373 1.0 GHz processor and 915GME chipset to provide a cost-effective solution.

The hybrid PXI-based testing system is usually composed of a PXI platform and diversified stand-alone instruments for elaborate testing tasks. PXI-3920 and PXI-3910 provide ample interfaces, including GPIB, USB, and COM ports for connecting and controlling instruments. Further, PXI-3920 and PXI-3910 are equipped with dual Giga-bit Ethernet ports so that users can use one for LAN connectivity and the other for controlling next-generation LXI instruments.

The PXI-3920 and PXI-3910 are specifically designed to deliver excellent durability and reliability. The cable-free mechanical construction of PXI-3920 and PXI-3910 are extremely durable. All CPU and memory chips are soldered on the PCB to increase resistance to shock and vibration. And an alumni-copper composite heat sink helps to disperse heat uniformly to maintain a stable operating temperature.

Combining a variety of instrument control interfaces and reliable mechanical and electronic design, the ADLINK PXI-3920 and PXI-3910 are excellent choices for hybrid PXI-based testing systems.

## 1.1 Features

- ▶ PXI specification Rev. 2.2 Compliant
- ▶ Scalable computing power
  - ▷ Intel Pentium M 760 2.0 GHz processor (PXI-3920)
  - ▷ Intel Celeron M 373 1.0 GHz processor (PXI-3910)
- ▶ On-board soldered CPU and memory to provide excellent shock and vibration resistance
- ▶ On-board soldered 512 MB DDR2 memory
- ▶ One DDR2 SODIMM socket for memory extension
- ▶ Integrated 80 GB SATA hard drive
- ▶ One CompactFlash socket for HDD replacement
- ▶ Integrated I/O
  - ▷ Dual Gigabit Ethernet ports
  - ▷ Four USB 2.0 Ports
  - ▷ Built-in GPIB (IEEE488) controller
  - ▷ Two RS-232/422/485 ports
  - ▷ DVI-I video connector
  - ▷ High definition audio output and input
  - ▷ Trigger I/O for advanced PXI trigger functionality
- ▶ Programmable watchdog timer

## 2 Hardware Information

### 2.1 PXI-3920/3910 Block Diagram

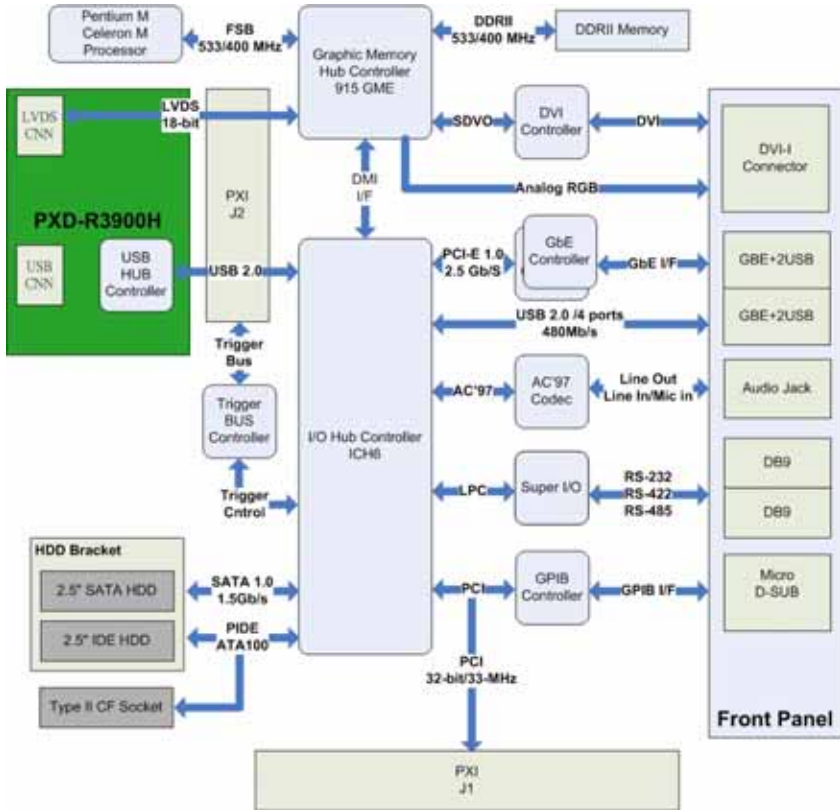


Figure 2-1: PXI-3920/3910 Bloc Diagram

## 2.2 PXI-3920/3910 Specifications

<b>Form Factor</b>	<ul style="list-style-type: none"> <li>• 3-slot 3U PXI Module</li> <li>• One system slot and two controller expansion slots</li> </ul>
<b>Weight</b>	<ul style="list-style-type: none"> <li>• 0.9 kg</li> </ul>
<b>CPU</b>	<p><b>PXI-3920</b></p> <ul style="list-style-type: none"> <li>• Intel Pentium M 760 2.0 GHz processor, 2 MB L2 cache, &amp; 533 MHz FSB supported</li> </ul> <p><b>PXI-3910</b></p> <ul style="list-style-type: none"> <li>• Intel Celeron M 373 1.0 GHz processor, 512 KB L2 cache, 400 MHz FSB supported</li> </ul>
<b>Chipset</b>	<ul style="list-style-type: none"> <li>• Intel 915GME Graphic Memory Control HUB</li> <li>• Intel I/O Controller Hub 6 Mobile (ICH6-M)</li> </ul>
<b>RAM</b>	<ul style="list-style-type: none"> <li>• Supports dual channel DDR2 SDRAM, 400/533 MHz, Up to 1.5 GB memory capacity</li> <li>• 512 MB on-board soldered memory</li> <li>• One DDR2 SO-DIMM socket for memory extension</li> </ul>
<b>BIOS</b>	<ul style="list-style-type: none"> <li>• Phoenix-Award BIOS in 4 Mb FWH</li> </ul>
<b>Display</b>	<ul style="list-style-type: none"> <li>• DVI-I connector for both digital and analog video signal outputs</li> <li>• Intel GMA 900 graphic media accelerator integrated in Intel 915GME Express Chipset</li> </ul> <p><b>DVI output</b></p> <ul style="list-style-type: none"> <li>• Single channel TMDS via SDVO to DVI controller</li> <li>• Supports up to 1600 x 1200 resolution</li> </ul> <p><b>CRT output</b></p> <ul style="list-style-type: none"> <li>• Analog CRT route to DVI-I connector on the faceplate</li> <li>• Supports up to 2048 x 1536 resolution</li> </ul> <p><b>LVDS output (for rear I/O only)</b></p> <ul style="list-style-type: none"> <li>• Single 18-bit LVDS Channel route to rear transition module</li> <li>• Supports LCD backlight control</li> </ul>
<b>Ethernet</b>	<ul style="list-style-type: none"> <li>• Dual Gigabit Ethernet controllers</li> <li>• Two RJ-45 connectors with speed/link/active LED on the faceplate</li> </ul>



<b>Hard Drive</b>	<ul style="list-style-type: none"> <li>• Supports Gen1 SATA interface, data transfer rate up to 150MB/s</li> <li>• Built-in 2.5", 80 GB SATA hard drive, 5400 RPM</li> </ul>
<b>CompactFlash</b>	<ul style="list-style-type: none"> <li>• One type II CF Socket, supporting ATA and PIO Type I and Type II CompactFlash card</li> </ul>
<b>USB</b>	<ul style="list-style-type: none"> <li>• Four USB 2.0 ports on the faceplate</li> </ul>
<b>GPIB</b>	<ul style="list-style-type: none"> <li>• On-board IEEE488 GPIB controller</li> <li>• Micro-D 25-pin connector on the faceplate (GPIB cable not included)</li> </ul>
<b>Serial Port</b>	<ul style="list-style-type: none"> <li>• Two 16C550 UART compatible COM ports on the faceplate</li> <li>• Supports RS-232, RS-422 and RS-485, configurable by jumper setting</li> </ul>
<b>Audio</b>	<ul style="list-style-type: none"> <li>• Supports High Definition Audio</li> <li>• Two audio jacks on the faceplate for line-in and speaker-out</li> </ul>
<b>Trigger I/O</b>	<ul style="list-style-type: none"> <li>• One SMB connector on the faceplate to route an external trigger signal to/from PXI trigger bus</li> </ul>
<b>OS Compatibility</b>	<ul style="list-style-type: none"> <li>• Microsoft Windows 2000</li> <li>• Microsoft Windows XP</li> <li>• Microsoft Windows Vista</li> <li>• Other OS support upon request</li> </ul>
<b>Environment</b>	<p><b>Temperature</b></p> <ul style="list-style-type: none"> <li>• Operating: 0 °C to 55 °C</li> <li>• Storage: -20 °C to 80 °C</li> <li>• Humidity: 5% to 95% non-condensing</li> <li>• Shock: 30 G half-sine, 11 ms pulse duration</li> </ul> <p><b>Vibration:</b></p> <ul style="list-style-type: none"> <li>• Non-operating, 2.46 Grms, 5 Hz to 500 Hz, three axis</li> <li>• Operating, 0.5 Grms, 5 Hz to 500 Hz, three axis with HDD</li> <li>• Operating, 6 Grms, 5 Hz to 500 Hz, three axis with Solid State Disk</li> </ul>
<b>Safety Certificates and Tests</b>	<p><b>Electromagnetic compatibility</b></p> <ul style="list-style-type: none"> <li>• Emissions: EN 55011 Class A</li> <li>• Immunity: EN 61326-1</li> </ul> <p><b>CE Compliance</b></p> <ul style="list-style-type: none"> <li>• PXI-3920/3910 meet the requirements of applicable European Directives.</li> </ul>


<b>Power Requirements</b>	<p><b>PXI-3920</b></p> <ul style="list-style-type: none"> <li>• 3.3 V: 1500 mA</li> <li>• 5 V: 7580 mA</li> <li>• 12 V: 550 mA</li> </ul> <p><b>PXI-3910</b></p> <ul style="list-style-type: none"> <li>• 3.3 V: 1480 mA</li> <li>• 5 V: 5050 mA</li> <li>• 12 V: 512 mA</li> </ul>
---------------------------	---

## 2.3 I/O Connectors & Pin Assignments

Peripheral	Faceplate Connector	On-board Connector
Video	DVI-I (DVI+VGA)	
Gigabit Ethernet	GbE#1 (RJ-45) GbE#2 (RJ-45)	
USB	USB#1 (Type A) USB#2 (Type A) USB#3 (Type A) USB#4 (Type A)	
GPIO	GPIO (Micro DB-25)	
Serial Port	COM#1 (DB-9) COM#2 (DB-9)	
HD Audio	Line-in + Speaker-out (audio jacks)	
PXI Trigger	TRIG (SMB)	
CompactFlash		Type II CF socket
SATA		SATA Gen 1 port

**Table 2-1: Peripheral Connectivity**

## 2.4 Faceplate Connectors/Indicators

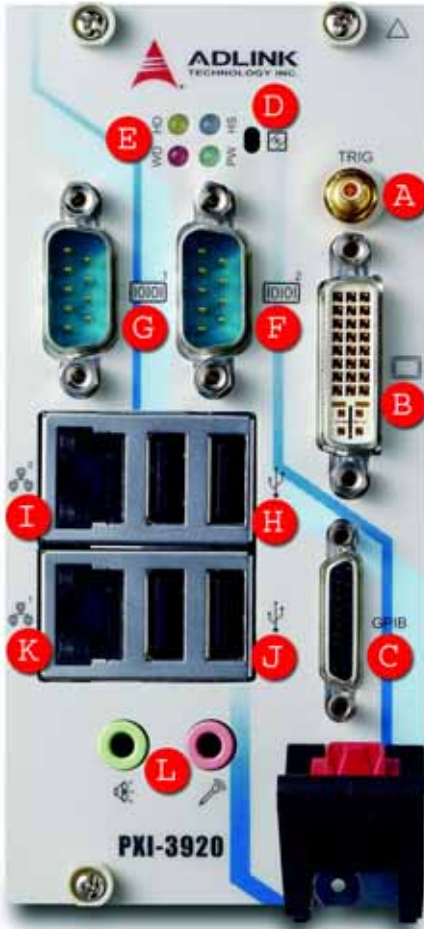

Symbol	Function
A	PXI Trigger I/O (SMB Connector)
B	DVI-I Connector
C	GPIB Connector (Micro D-Sub 25P)
D	Reset Button
E	LED indicators
F	COM2 (DB9)
G	COM1 (DB9)
H	2x USB connectors (Type-A)
I	Gigabit Ethernet #2 (RJ-45)
J	2x USB connectors (Type-A)
K	Gigabit Ethernet #1 (RJ-45)
L	Audio Jack

Figure 2-2: PXI-3920/3910 Faceplate


## 2.4.1 PXI Trigger Connector

The PXI trigger connector is a SMB connector and is used to route an external trigger signal to or from the PXI backplane. Trigger signals are TTL compatible and edge sensitive. The PXI-3920/3910 provides four trigger routing modes from/to the PXI trigger connector to synchronize PXI modules, including:

- ▶ From a selected trigger bus line to PXI trigger connector
- ▶ From the PXI trigger connector to a selected trigger bus line
- ▶ From software trigger to a selected trigger bus line
- ▶ From software trigger to PXI trigger connector

All trigger modes are programmable by the driver provided with PXI-3920/3910. Please refer to Appendix A: Trigger I/O Function Reference for further information.


**Figure 2-3: PXI Trigger & Pin Assignments**

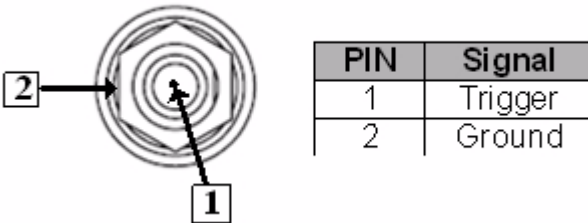

## 2.4.2 DVI-I Connector

The DVI-I connector is used to connect PXI-3920/3910 to the monitor. PXI-3920/3910 supports both digital (DVI) and analog (VGA) monitors. While connecting to an analog (VGA) monitor, you need to install the DVI-to-VGA adapter, which is shipped with PXI-3920/3910 controllers, on the DVI-I connector.

**Figure 2-4: DVI Connector & Pin Assignments**

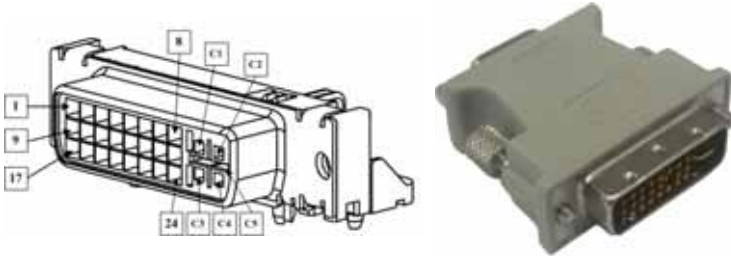


PIN	Signal	Description
1	TMDS Data2-	T.M.D.S link#0 Channel#2 Differential Pair
2	TMDS Data2+	
3	Shield Ground	T.M.D.S channel#0 Shield
4	Reserved	Reserved for link#1
5	Reserved	Reserved for link#1
6	DDC Clock	The clock line for the DDC I/F
7	DDC Data	The data line for the DDC I/F
8	Analog VSYNC	Vertical synchronization signal for the analog interface
9	TMDS Data1-	T.M.D.S link#0 Channel#1 Differential Pair
10	TMDS Data1+	
11	Shield Ground	T.M.D.S channel#1 Shield
12	Reserved	Reserved for link#1
13	Reserved	Reserved for link#1
14	+5V Power	Provide by the system to enable the monitor to provide EDID
15	Ground	Return for +5V,HSync and VSync
16	Hot Plug Detect	Driven by monitor to enable the system to identify the presence of a monitor
17	TMDS Data0-	T.M.D.S link#0 Channel#0 Differential Pair
18	TMDS Data0+	
19	Shield Ground	T.M.D.S channel#0 Shield
20	Reserved	Reserved for link#1
21	Reserved	Reserved for link#1
22	Ground	T.M.D.S Clock Shield
23	TMDS Clock+	T.M.D.S Clock Differential Pair
24	TMDS Clock-	
C1	Analog Red	Analog Red Signal
C2	Analog Green	Analog Green Signal
C3	Analog Blue	Analog Blue Signal
C4	Analog HSYNC	Vertical synchronization signal for the analog input
C5	Analog Ground	Analog R,G and B return

### 2.4.3 GPIB Connector

The GPIB connector on PXI-3920/3910 is a micro D-sub 25P connector and is used to control external bench-top instruments. You need the ACL-IEEE488-MD1 cable to connect PXI-3920/3910 and any instruments. The on-board GPIB controller has the following features:

- ▶ Fully compatible with the IEEE 488 standard
- ▶ Up to 1.5MB/s data transfer rates
- ▶ On-board 1KB FIFO for read/write operations
- ▶ Provides driver APIs compatible with NI-488.2 driver software
- ▶ Up to 14 instruments may be connected

Figure 2-5: GPIB Connector & Pin Assignments

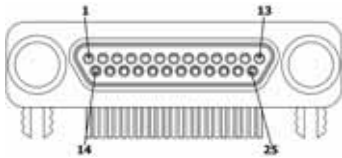

PIN	Signal	Description
1	DIO1#	GPIB Data 1
2	DIO2#	GPIB Data 2
3	DIO3#	GPIB Data 3
4	DIO4#	GPIB Data 4
5	EOI	End Or Identify
6	DAV	Data Valid
7	NRFD	Not Ready For Data
8	NDAC	Not Data Accepted
9	IFC	Interface Clear
10	SRQ	Service Request
11	ATN	Attention
12	Chassis Ground	Chassis Ground
13	Ground	Signal Ground
14	DIO5#	GPIB Data 5
15	DIO6#	GPIB Data 6
16	DIO7#	GPIB Data 7
17	DIO8#	GPIB Data 8
18	REN	Remote Enable
19	Ground	Signal Ground
20	Ground	Signal Ground
21	Ground	Signal Ground
22	Ground	Signal Ground
23	Ground	Signal Ground
24	Ground	Signal Ground
25	Ground	Signal Ground

## 2.4.4 Reset Button

The reset button is used to perform hard reset for PXI-3920/3910. You can use a pin-like object to push the reset button.

## 2.4.5 LED Indicators

There are four LED indicators on the faceplate to indicate the operating status of the PXI-3920/3910. The following table describes the color and function of the LED indicators.


LED Indicator	Color	Description
Power LED	Green	Indicates system power status. If the LED is on, the system boots up normally and the main power supply is good.
HDD LED	Yellow	Indicates operating state of the HDD. When the SATA hard drive or CF card is active, the LED indicator flashes.
Watchdog	Red	Indicates status of the watchdog timer. When watchdog timer expires, the LED is on. Please refer to Appendix B for watchdog timer programming information.
HS LED	Blue	Indicates system status. If the system status is good, the LED is on (off during system booting up). If the LED keeps blinking, the system is malfunctioning.  <i>Note:</i> If you encounter any malfunctions, clear the CMOS and reboot the system. If the system does not respond properly, please contact ADLINK for assistance.

**Table 2-2: LED Indicators**

## 2.4.6 COM Ports

The PXI-3920/3910 provides two COM ports on the faceplate in D-sub 9P connectors. These two serial ports are 16C550 UART compatible and support RS-232/RS-422/RS-485 by jumper selection. Please refer to section 2.6.2 for setting the COM ports.

**Figure 2-6: COM Ports & Pin Assignments**

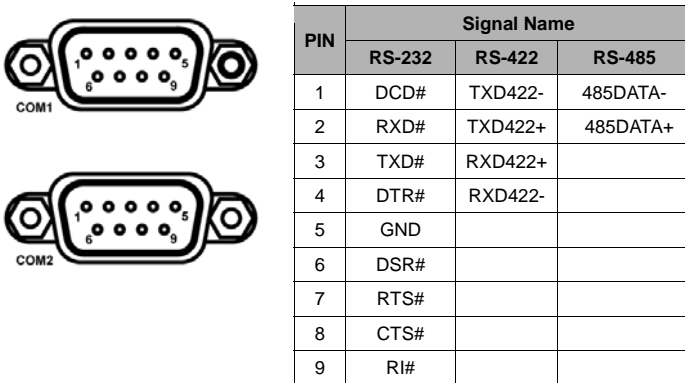




## 2.4.7 USB 2.0 Ports

The PXI-3920/3910 provides four USB 2.0 ports via Type A USB connectors on the faceplate. All USB ports are compatible with high-speed, full-speed, and low-speed USB devices. The PXI-3920/3910 controller supports multiple boot devices, including USB flash drive, USB floppy, USB CD-ROM, etc. The boot priority and boot device can be configured in BIOS (see section 3.8 for details).

**Figure 2-7: USB 2.0 Ports & Pin Assignments**

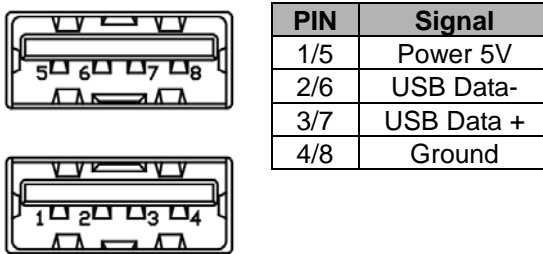

Additionally, the PXI-3920/3910 is shipped with a USB-to-PS2 cable for users who need to connect a PS/2 keyboard and mouse.

**Figure 2-8: USB-to-PS/2 Cable**




## 2.4.8 Gigabit Ethernet Port

The PXI-3920/3910 integrates two Marvell 88E8053 Gigabit Ethernet controllers via X1 PCI-Express interface to provide dual Ethernet connectivity.

The Ethernet controller supports the following features:

- ▶ x1 PCI Express interface with 2.5 GHz signaling
- ▶ Advanced error reporting
- ▶ Message signaled interrupts
- ▶ TCP segmentation off load/large-send support
- ▶ 802.3x flow control-compliant
- ▶ IEEE 802.1p and 802.1q support
- ▶ 10/100/1000 IEEE 802.3-compliant
- ▶ Automatic MDI/MDIX crossover at all speeds
- ▶ ACPI 2.0 specification
- ▶ Wake-On-Link feature
- ▶ Fully integrated ASF 2.0 functionality with on-chip  $\mu$ c
- ▶ SMBus 2.0 master interface for ASF functionality
- ▶ Serial Peripheral Interface (SPI) for ASF firmware and for

**Figure 2-9: Gigabit Ethernet Port & Pin Assignments**

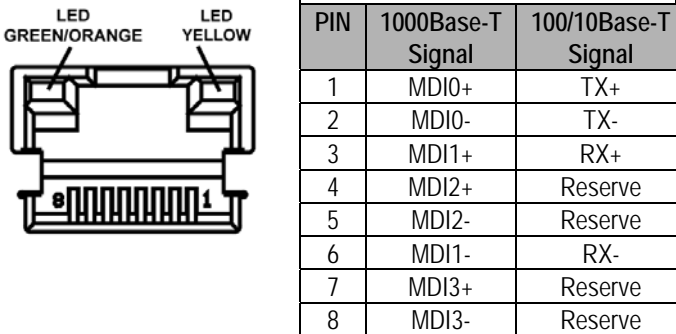


Active/Link LED		
LED Color	Status	Description
Yellow	Off	Ethernet port is disconnected
	ON	Ethernet port is connected with no data transmission
	Flash	Ethernet port is connected and is transmitting/receiving data.
Speed LED		
LED Color	Status	Description
Green/Orange	Off	10 Mbps
	Green	100 Mbps
	Orange	1000 Mbps

**Table 2-3: Gigabit Ethernet LED Status Description**

## 2.4.9 High Definition Audio Ports


The PXI-3920/3910 implements Intel High Definition audio using the Realtek ALC260 chip. The HD audio supports up to 24-bit, 192 Kbps high quality headphone/speaker output and line input. Users can access the audio jacks on the faceplate of PXI-3920/3910.

**Figure 2-10: High Definition Audio Ports**

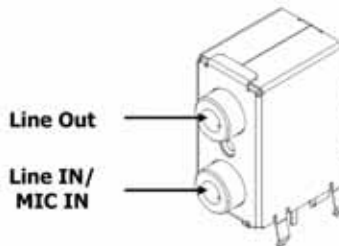

## 2.5 On-board Connectors Layout


Figure 2-11: PXI-3920/3910 Board Layout

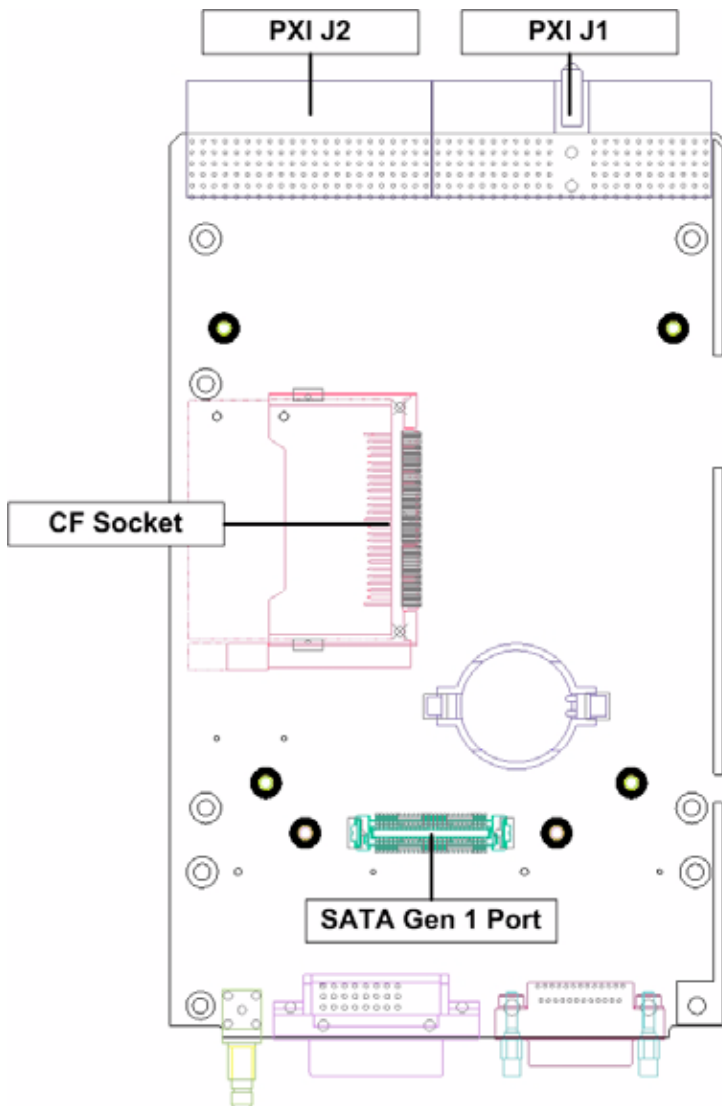

## 2.5.1 CompactFlash Socket

The PXI-3920/3910 is equipped with a type II CompactFlash socket which is located on the first layer of the PCB (under the CPU core module). The CF interface supports both ATA and PIO modes. You can use a CF card as replacement of hard drive for better shock/vibration resistance.

**Figure 2-12: CompactFlash Socket & Pin Assignments**

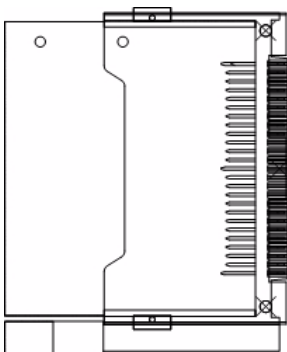


PIN	SIGNAL	PIN	SIGNAL
1	GND	26	GND
2	D03	27	D11
3	D04	28	D12
4	D05	29	D13
5	D06	30	D14
6	D07	31	D15
7	CS1#	32	CS3#
8	GND	33	GND
9	GND	34	IORDY#
10	GND	35	IOWR#
11	GND	36	WE#
12	GND	37	INTRQ
13	VCC	38	VCC
14	GND	39	CSEL#
15	GND	40	NC
16	GND	41	RESET#
17	GND	42	IORDY
18	A02	43	DMARQ
19	A01	44	DMACK#
20	A00	45	DASP#
21	D00	46	PDIAG#
22	D01	47	D08
23	D02	48	D09
24	IOCS16#	49	D10
25	GND	50	GND

## 2.5.2 SATA Port

The PXI-3920/3910 provides a SATA Gen. 1 port and is shipped with a pre-installed 2.5" SATA hard drive. The SATA host controller supports two modes of operation, the legacy mode using I/O space and AHCI mode using memory space. You can also use a 2.5" solid state disk (SSD) as a replacement SATA hard drive for shock/vibration resistance.


**Figure 2-13: SATA Gen. 1 Port & Pin Assignments**



Signal	PIN	PIN	Signal
GND	1	2	GND
Reserve	3	4	Reserve
Reserve	5	6	Reserve
Reserve	7	8	Reserve
Reserve	9	10	Reserve
Reserve	11	12	Reserve
Reserve	13	14	Reserve
Reserve	15	16	Reserve
Reserve	17	18	Reserve
Reserve	19	20	GND
GND	21	22	Reserve
Reserve	23	24	Reserve
Reserve	25	26	Reserve
Reserve	27	28	Reserve
Reserve	29	30	GND
Reserve	31	32	+5V
Reserve	33	34	+5V
Reserve	35	36	+5V
Reserve	37	38	+12V
Reserve	39	40	+12V
Reserve	41	42	+12V
GND	43	44	GND
SATA_RXn	45	46	SATA_TXn
SATA_RXp	47	48	SATA_TXp
GND	49	50	GND

## 2.5.3 PXI J1


Figure 2-14: J1 Connector & Pin Assignments

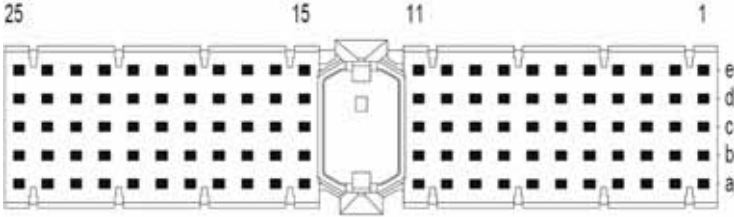

Pin	Z	A	B	C	D	E	G
J1-25	GND	+5V	REQ64#	ENUM#	+3.3V	+5V	GND
J1-24	GND	AD[1]	+5V	V(I/O)	AD[0]	ACK64#	GND
J1-23	GND	+3.3V	AD[4]	AD[3]	+5V	AD[2]	GND
J1-22	GND	AD[7]	GND	+3.3V	AD[6]	AD[5]	GND
J1-21	GND	+3.3V	AD[9]	AD[8]	M66EN	C/BE[0]#	GND
J1-20	GND	AD[12]	GND	V(I/O)	AD[11]	AD[10]	GND
J1-19	GND	+3.3V	AD[15]	AD[14]	GND	AD[13]	GND
J1-18	GND	SERR#	GND	+3.3 V	PAR	C/BE[1]#	GND
J1-17	GND	+3.3V	NC	NC	GND	PERR#	GND
J1-16	GND	DEVSEL#	GND	V(I/O)	STOP#	LOCK#	GND
J1-15	GND	+3.3V	FRAME#	IRDY#	GND	TRDY#	GND
J1-12~14	GND						
J1-11	GND	AD[18]	AD[17]	AD[16]	GND	C/BE[2]#	GND
J1-10	GND	AD[21]	GND	+3.3V	AD[20]	AD[19]	GND
J1-9	GND	C/BE[3]#	GND	AD[23]	GND	AD[22]	GND
J1-8	GND	AD[26]	GND	V(I/O)	AD[25]	AD[24]	GND
J1-7	GND	AD[30]	AD[29]	AD[28]	GND	AD[27]	GND
J1-6	GND	REQ0#	GND	+3.3V	CLK0	AD[31]	GND
J1-5	GND	NC	NC	RST#	GND	GNT0#	GND
J1-4	GND	NC	HEALTHY#	V(I/O)	INTP	INTS	GND
J1-3	GND	INTA#	INTB#	INTC#	+5V	INTD#	GND
J1-2	GND	TCK	+5V	TMS	TDO	TDI	GND
J1-1	GND	+5V	-12V	TRST#	+12V	+5V	GND
Pin	Z	A	B	C	D	E	G

## 2.5.4 PXI J2

Figure 2-15: J2 Connector & Pin Assignments

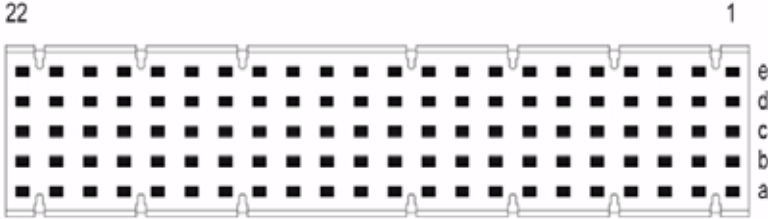


Pin	Z	A	B	C	D	E	G
J1-22	GND	NC	NC	NC	NC	NC	GND
J1-21	GND	CLK6	GND	NC	RSV	RSV#	GND
J1-20	GND	CLK5	GND	RSV	GND	RSV	GND
J1-19	GND	GND	GND				GND
J1-18	GND	PXI_TRIG3	PXI_TRIG4	PXI_TRIG5	GND	PXI_TRIG6	GND
J1-17	GND	PXI_TRIG2	GND	REST#	REQ6#	GNT6#	GND
J1-16	GND	PXI_TRIG1	PXI_TRIG0	DEG#	GND	PXI_TRIG7	GND
J1-15	GND	NC	GND	FAL#	REQ5#	GNT5#	GND
J1-14	GND	AD[35]	AD[34]	AD[33]	GND	AD[32]	GND
J1-13	GND	AD[42]	AD[41]	AD[40]	GND	AD[39]	GND
J1-12	GND	AD[45]	GND	V(I/O)	AD[44]	AD[43]	GND
J1-11	GND	AD[49]	AD[48]	AD[47]	GND	AD[46]	GND
J1-10	GND	AD[52]	GND	V(I/O)	AD[51]	AD[50]	GND
J1-9	GND	AD[56]	AD[55]	AD[54]	GND	AD[53]	GND
J1-8	GND	AD[56]	AD[55]	AD[54]	GND	AD[53]	GND
J1-7	GND	AD[59]	GND	V(I/O)	AD[58]	AD[57]	GND
J1-6	GND	AD[63]	AD[62]	AD[61]	GND]	AD[60]	GND
J1-5	GND	C/BE[5]	GND	V(I/O)	C/BE[4]#	PAR64	GND
J1-4	GND	V(I/O)	NC	C/BE[7]#	GND	C/BE[6]#	GND
J1-3	GND	CLK4	GND	GNT3#	REQ4#	GNT4#	GND
J1-2	GND	CLK2	CLK3	SYSEN#	GNT2#	REQ3#	GND
J1-1	GND	CLK1	GND	REQ1#	GNT1#	REQ2#	GND
Pin	Z	A	B	C	D	E	G



## 2.6 Jumper Layout

Figure 2-16: PXI-3920/3910 Jumper Layout

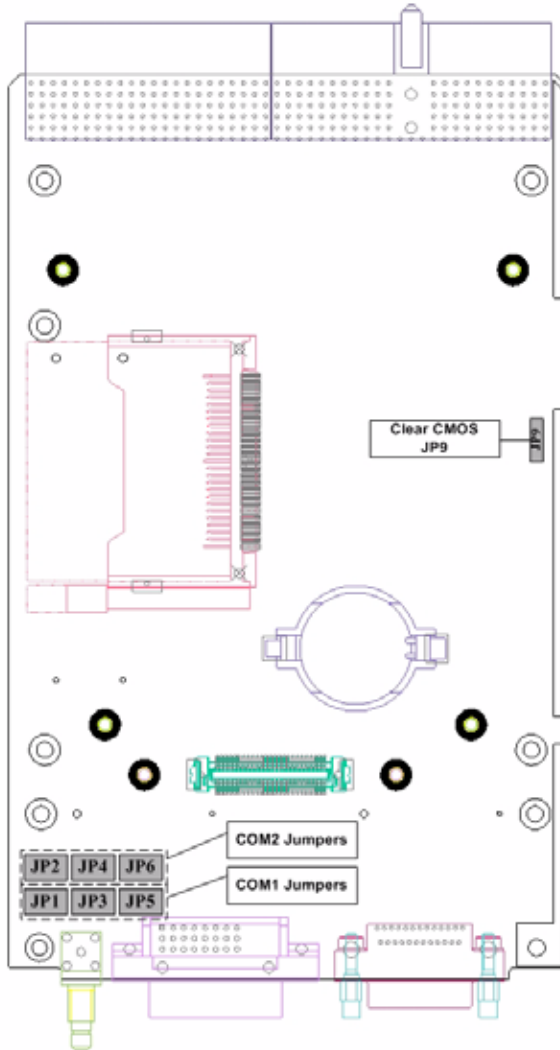

### 2.6.1 Clear CMOS (JP9)

If you encounter an abnormal condition that causes PXI-3920/3910 to halt or fail to boot, clear the CMOS and restore the controller BIOS to its default settings. To clear the CMOS, locate the JP9 jumper on the board and shorten pin#2 and pin#3. After you have cleared the COMS, restore the jumper by returning to normal mode (shorten pin#1 and pin#2).


Figure 2-17: JP9 (Clear CMOS) Settings



## 2.6.2 COM1/COM2 Mode Settings (JP1/JP2/JP3/JP4/JP5/JP6)

COM1 and COM2 on PXI-3920/3910 controllers support RS-232, RS-422, and RS-485 specifications. JP1, JP2, JP3, JP4, JP5, and JP6 are used set the operation mode of COM1 and COM2. Please refer to the following table for mode settings.

Figure 2-18: COM1 & COM2 JP1 through JP6 Settings

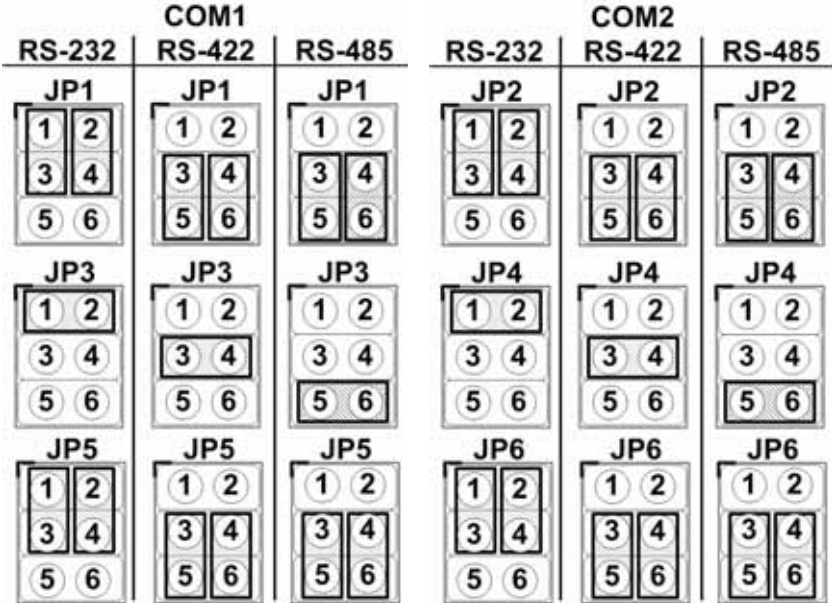

This page intentionally left blank.

## 3 Getting Started

This chapter illustrates how to install PXI-3920/PXI-3910 into your PXI system. Additional hardware installations are also discussed.

### 3.1 Installation Environment

Whenever unpacking and preparing to install any equipment described in this manual, please refer to the ***Important Safety Instructions*** chapter of this manual.

Only install equipment in well lit areas on flat, sturdy surfaces with access to basic tools such as flat and cross head screwdrivers, preferably with magnetic heads as screws and standoffs are small and easily misplaced.

#### Recommended Installation Tools

- ▶ Phillips (cross-head) screwdriver
- ▶ Flat-head screwdriver
- ▶ Anti-static Wrist Strap
- ▶ Anti-static mat

ADLINK PXI-3920/3910 System Controllers are electro-static sensitive equipment that can be easily damaged by static electricity. The equipment must be handled on a grounded anti-static mat. The operator must wear an anti-static wristband, grounded at the same point as the anti-static mat.

Inspect the carton and packaging for damage. Shipping and handling could cause damage to the equipment inside. Make sure that

the equipment and its associated components have no damage before installing.



CAUTION:

The equipment must be protected from static discharge and physical shock. Never remove any of the socketed parts except at a static-free workstation. Use the anti-static bag shipped with the product to handle the equipment and wear a grounded wrist strap when servicing.

---

### 3.1.1 Compatible Chassis

The PXI-3920/3910 implements rear I/O functions for inter-chassis signal transmissions. Before installing the PXI-3920/3910, please make sure your PXI chassis is compatible with PXI-3920/3910. You can use the following PXI chassis with PXI-3920/3910.

- ▶ ADLINK PXIS-2506
- ▶ ADLINK PXIS-2508
- ▶ ADLINK PXIS-2558T-B (See section 3.9 for details)
- ▶ ADLINK PXIS-2630
- ▶ ADLINK PXIS-2670
- ▶ ADLINK PXIS-2700
- ▶ Any National Instruments PXI chassis



CAUTION:

DO NOT install PXI-3920/3910 in the following PXI chassis:  
ADLINK PXIS-2556/2556T  
ADLINK PXIS-2558T-A  
ADLINK PXIS-2650/2650T  
ADLINK PXIS-2680P  
ADLINK PXIS-2690P

---

## 3.2 Package Contents

Before continuing, check the package contents for any damage and check if the following items are included in the packaging.

### PXI-3920

- ▶ PXI-3920 Controller (equipped with CPU, RAM and HDD)
- ▶ USB-to-PS2 KB/MS cable
- ▶ DVI-to-VGA adapter
- ▶ User's Guide
- ▶ ADLINK All-In-One CD

### PXI-3910

- ▶ PXI-3910 Controller (equipped with CPU, RAM and HDD)
- ▶ USB-to-PS2 KB/MS cable
- ▶ DVI-to-VGA adapter
- ▶ User's Guide
- ▶ ADLINK All-In-One CD



**DO NOT** install or apply power to equipment that is damaged or if there is missing/incomplete equipment. Retain the shipping carton and packing materials for inspection. Please contact your ADLINK dealer/vendor immediately for assistance. Obtain authorization from your dealer before returning any product to ADLINK.



The packaging of OEM versions with non-standard configurations, functionality, or package contents may vary according to different configuration requests.

---

### 3.3 Installing PXI-3920/3910

1. Locate the system controller slot (Slot 1)
2. Push down (loosen) the ejector/injector handle of the PXI-3920/3910 controller.
3. Align the controller's top and bottom edges to the card guides, then carefully slide the PXI-3920/3910 into the chassis.





4. Pull up the ejector/injector handle until the PXI-3920/3910 is properly connected to the chassis backplane.



5. Fasten the screws on the faceplate of PXI-3920/3910, and then connect all peripheral devices to the PXI-3920/3910 controller.



### 3.4 Hard Drive Replacement

By default, the PXI-3920/3910 PXI controller is shipped with a 2.5" 80 GB SATA hard drive pre-installed. For users who need to change the SATA hard drive or use a solid state disk (SSD) as the replacement hard drive, please follow the instructions below.

1. The hard drive is located on the back side of the PXI-3920/3910 controller. Locate the four screws that attach the hard drive to the bracket.



2. Loosen the screws.



3. Gently pull out the SATA hard drive. Be careful not to bend or break the SATA Board-to-Board connector.



4. To replace the HD with your choice of solid state hard drive or other compatible SATA hard drive, follow the reverse steps, and re-install the PXI-3920/3910 to your PXI system.



### 3.5 CompactFlash card installation

The PXI-3920/3910 provides a CompactFlash Type II socket to accommodate a CF card as a replacement hard drive. You can also install a SATA hard drive and CF card simultaneously and set the boot device preferences in BIOS (refer to section 3.8 for details). Please follow the instructions below to install the CF card.

1. Locate the CompactFlash socket. The socket is located under the SATA hard drive.



2. Insert the CF card and press down to make sure it is firmly attached in its socket.



## 3.6 BIOS Configuration

The Basic Input/Output System (BIOS) is a program that provides a basic level of communication between the processor and peripherals. In addition, the BIOS also contain code for various advanced features applied to the PXI-3920/3910 controller. The BIOS setup program includes menus for configuring settings and enabling PXI-3920/3910 controller features. Most users do not need to use the BIOS setup program, as the PXI-3920/3910 controller ships with default settings that work well for most configurations.



Changing BIOS settings may lead to incorrect controller behavior and possibly an unbootable controller. If this happens, follow the instructions in section 2.6.1 to clear CMOS and then restore the default settings. In general, do not change a BIOS setting unless you are absolutely certain of what it does.

---

## 3.7 Operating System Installation

For more detailed information about the operating system, refer to the documentation provided by the operating system vendor. The preferred/supported operating systems for PXI-3920/3910 are:

- ▶ Windows 2000
- ▶ Windows XP
- ▶ Windows Vista
- ▶ For other OS support, please contact ADLINK

Most operating systems require initial installation on a hard drive, floppy drive, or a CD-ROM drive. The PXI-3920/3910 controller supports USB CD-ROM drive, USB flash disk, USB external hard drive, or a USB floppy drive as the first boot device. Please refer to section 3.8 for information about setting the boot devices. These devices should be configured, installed, and tested with the supplied drivers before attempting to load the new operating system.



Read the release notes and installation documentation provided by the operating system vendor. Be sure to read all the README files or documents provided on the distribution disks, as these typically note documentation discrepancies or compatibility problems.

---

Select the appropriate boot device order in the SETUP/BIOS boot menu depending on the OS installation media used. For example, if the OS is distributed with a bootable installation CD, select USB CD-ROM as the first boot device and reboot the system with the installation CD installed in the USB CD-ROM drive.

Proceed with the OS installation as directed and be sure to select appropriate device types if prompted. Refer to the appropriate hardware manuals for specific device types and compatibility modes of ADLINK PXI products.

When installation is complete, reboot the system and set the boot device order in the SETUP boot menu appropriately.

### 3.8 Setting PXI-3920/3910 Boot Devices

The PXI-3920/3910 controller by default boots up from the SATA hard drive. However, you can also set a USB device or a CF card as the boot device in BIOS. Please follow the instructions below to set the boot device of PXI-3920/3910.

#### Boot from SATA hard drive

- ▶ Make sure the bootable SATA hard drive is installed in the hard drive bracket.
- ▶ Power on the PXI-3920/3910 and enter BIOS to modify the setting of boot device as following:
  - ▷ [Advanced BIOS Features] » [First Boot Device] » [Hard Disk]
  - ▷ [Advanced BIOS Features] » [Hard Disk Boot Priority] » [Ch2 M.]
- ▶ Save the change
- ▶ Reboot the system

#### Boot from on-board CF card

- ▶ Make sure the bootable CF is firmly installed in the CF socket.
- ▶ Power on the PXI-3920/3910 and enter BIOS to modify the setting of boot device as following:
  - ▷ [Advanced BIOS Features] » [First Boot Device] » [Hard Disk]
  - ▷ [Advanced BIOS Features] » [Hard Disk Boot Priority] » [Ch0 M.]
- ▶ Save the change
- ▶ Reboot the system

### **Boot from USB CD-ROM drive**

- ▶ Connect the USB CD-ROM drive via a USB port on the faceplate.
- ▶ Put a bootable CD in the USB CD-ROM Drive.
- ▶ Power on the PXI-3920/3910 and enter BIOS to modify the setting of boot device as following:
  - ▷ [Advanced BIOS Features] » [First Boot Device] » [USB-CDROM]
- ▶ Save the change
- ▶ Reboot the system

### **Boot from USB Flash disk**

- ▶ Connect a bootable USB Flash disk via a USB port on the faceplate.
- ▶ Power on the PXI-3920/3910 and enter BIOS to modify the setting of boot device as following:
  - ▷ [Advanced BIOS Features] » [First Boot Device] » [Hard Disk]
  - ▷ [Advanced BIOS Features] » [Hard Disk Boot Priority] » [USB-HDD0]



If there are multiple USB external devices installed, you will see USB-HDD0, USB-HDD1 and etc. Please recognize the boot device according the model name of device come after the USB-HDDx on the screen

- 
- ▶ Save the change
  - ▶ Reboot the system



### Boot from USB external hard drive

- ▶ Connect a bootable USB external hard drive via a USB port on the faceplate.
- ▶ Power on the PXI-3920/3910 and enter BIOS to modify the setting of boot device as following:
  - ▷ [Advanced BIOS Features] » [First Boot Device] » [Hard Disk]
  - ▷ [Advanced BIOS Features] » [Hard Disk Boot Priority] » [USB-HDD0]



NOTE:

If there are multiple USB external devices installed, you will see USB-HDD0, USB-HDD1 and etc. Please recognize the boot device according the model name of device come after the USB-HDDx on the screen

---

- ▶ Save the change
- ▶ Reboot the system

### Boot from USB floppy drive

- ▶ Connect the USB floppy drive via a USB port on the faceplate.
- ▶ Put a bootable disk in the USB floppy drive.
- ▶ Power on the PXI-3920/3910 and enter BIOS to modify the setting of boot device as following:
  - ▷ [Advanced BIOS Features] » [First Boot Device] » [USB-FLOPPY]
- ▶ Save the change
- ▶ Reboot the system

### 3.9 Using PXI-3920/3910 with PXI-2558T-B Chassis

This section describes the usage of PXI-3920/3910 controllers in PXI-2558T-B Chassis. This chassis is unique in that it supports a built-in LCD display and warrants special BIOS configurations to properly operate the system controller.

The PXI-3920/3910 controller supports a rear I/O option. The rear I/O option is designed to operate with a matching rear transition module which provides internal chassis I/O, including video signals, USB signals, etc. The ADLINK PXI-2558T-B is a 3U 8-slot PXI chassis with built-in 8.4" LCD touch panel. It contains a matching rear transition module for PXI-3920/3910 to support internal signal transmission.

While installing PXI-3920/3910 in a PXI-2558T-B chassis, please make sure you configure the correct BIOS settings to turn on the LCD touch panel using the following steps:

- ▶ Press DEL while booting to enter the BIOS setup screen.
- ▶ Select the "Advanced Chipset Features" option.
- ▶ Set the "Boot Display" option to "CRT + LVDS".
- ▶ Set the "Panel Resolution" to "800 x 600".
- ▶ Save your settings and exit the BIOS.



Currently PXI-2558T-B is the only PXI chassis with a built-in LCD touch panel which supports PXI-3920/3910 controllers. Please DO NOT install PXI-3920/3910 controllers in other chassis with built-in LCD panel, such as PXI-2556T, PXI-2650T, PXI-2680P, or PXI-2690P.

---

## 4 Driver Installation

After installing the operating system, you need to install all related drivers to make your system work accordingly. In this section, we describe the drivers needed for Windows operating systems and the procedures to install them. For other OS support, please contact ADLINK for further information.



NOTE:

The Windows operating system environment supports a wide array of drivers as it has extended plug and play support. Most standard I/O device drivers are automatically included.

---

### 4.1 Chipset Drivers

This section describes the procedure to install the chipset driver of PXI-3920/3910. The chipset driver outlines to the operating system how to configure the Intel 915GME chipset components in order to ensure that the following features function properly:

- ▶ Core PCI and ISAPNP Services
- ▶ PCIe Support
- ▶ IDE/ATA33/ATA66/ATA100 Storage Support
- ▶ SATA Storage Support
- ▶ USB Support
- ▶ Identification of Intel Chipset Components in the Device Manager

One of the following operating systems must be fully installed and running on the system before installing this software:

- ▶ Microsoft Windows Server 2003
- ▶ Microsoft Windows Server 2003 x64 Edition\*
- ▶ Microsoft Windows XP Professional x64 Edition\*
- ▶ Microsoft Windows XP
- ▶ Microsoft Windows 2000
- ▶ Microsoft windows Vista

Please follow the following steps to install chipset drivers for PXI-3920/3910.

- ▶ Close any running application.
- ▶ Insert the ADLINK All-in-One CD. The chipset driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI  
controller\PXI-  
3910_20\Chipset\2000_XP_Vista\, where x:  
denotes the CD-ROM drive.
```

- ▶ Execute Setup.exe and follow on-screen instructions to complete the setup.
- ▶ Reboot your system.

## 4.2 Graphics Driver

The PXI-3920/3910 controller is equipped with Intel GMA 900 graphic media accelerator integrated in the Intel 915GME Express Chipset. The Intel Graphics Media Accelerator Driver package supports the following operating systems:

- ▶ Windows 2000
- ▶ Windows XP

Please follow the following steps to install graphics drivers for PXI-3920/3910.

- ▶ Close any running application.
- ▶ Insert the ADLINK All-in-One CD. The chipset driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI  
controller\PXI-3910_20\VGA\2000_XP\, where  
x: denotes the CD-ROM drive.
```

- ▶ Execute Setup.exe and follow on-screen instructions to complete the setup.
- ▶ Reboot your system.



NOTE:

If you use PXI-3920/3910 with ADLINK PXIS-2558T-B chassis, please set the graphic output as "Dual Display" mode to enable the LCD touch panel.

---

## 4.3 Ethernet Drivers

The PXI-3920/3910 controller integrates two Marvell 88E8053 Gigabit Ethernet controllers to provide connectivity for LAN or LXI instruments. Please follow the following steps to install Ethernet drivers for PXI-3920/3910:

### For Windows 2000 Users:

- ▶ After booting the Windows system, there are two unidentified Ethernet controllers listed in the Device Manager.
- ▶ Right-click on the Ethernet controller and select "Update Driver ..."
- ▶ Follow the on-screen instructions to specify the location of driver. The Ethernet driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI  
controller\PXI-3910_20\Ethernet\2000\  
where x: denotes the CD-ROM drive.
```

- ▶ Repeat step 2 and 3 to install the Ethernet driver for another Ethernet controller.

### For Windows XP Users:

- ▶ After booting the Windows system, there are two unidentified Ethernet controllers listed in the Device Manager.
- ▶ Right-click on the Ethernet controller and select "Update Driver ..."
- ▶ Follow the on-screen instructions to specify the location of driver. The Ethernet driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI  
controller\PXI-3910_20\Ethernet\XP\  
where x: denotes the CD-ROM drive.
```

- ▶ Repeat steps 2 and 3 to install the Ethernet driver for other Ethernet controllers.

## 4.4 Audio Drivers

This section describes the procedure to install the audio driver of PXI-3920/3910. The PXI-3920/3910 controller supports Intel High Definition audio using Realtek ALC260 chip, which provides up to 24-bit, 192 Kbps high quality audio input/output. Please follow the following steps to install audio driver for PXI-3920/3910.

### For Windows 2000 and XP users:

1. Close any running application.
2. For Windows 2000 and XP, you need to install Microsoft UAA (Universal Audio Architecture) driver first. Please install the corresponding UAA driver according to your operating system.

Operating System	UAA Driver
Windows 2000 SP4	x:\Driver Installation\PXI Platform\PXI controller\PXI-3910_20\Audio\UAA\KB888111W2KSP4.EXE
Windows XP SP1	x:\Driver Installation\PXI Platform\PXI controller\PXI-3910_20\Audio\UAA\KB888111XPSP1.EXE
Windows XP SP2	x:\Driver Installation\PXI Platform\PXI controller\PXI-3910_20\Audio\UAA\KB888111XPSP2.EXE

3. The audio driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI
  controller\PXI-3910_20\Audio\2000_XP\,
  where x: denotes the CD-ROM drive.
```

4. Execute Setup.exe and follow on-screen instructions to complete the setup.
5. Reboot your system.

### For Windows Vista users:

1. Close any running application.
2. The audio driver is located in the directory:  

```
x:\Driver Installation\PXI Platform\PXI  
controller\PXI-3910_20\Audio\Vista\
```

, where  
x: denotes the CD-ROM drive.
3. Execute Setup.exe and follow on-screen instructions to complete the setup.
4. Reboot your system.

## 4.5 GPIB Driver

The PXI-3920/3910 controller features the on-board GPIB controller to provide connectivity between PXI and GPIB instruments. To use the GPIB controller, you need to install the ADLINK GPIB driver package for Windows 2000/XP/Vista. The driver package also contains function libraries and a utility to interact with GPIB instruments. Please follow the following steps to install GPIB drivers for PXI-3920/3910.

- ▶ Close any running application.
- ▶ Insert the ADLINK All-in-One CD. The GPIB driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI  
controller\PXI-3910_20\GPIB\2000_XP_Vista\
```

, where x: denotes the CD-ROM drive.

- ▶ Execute Setup.exe and follow on-screen instructions to complete the setup.
- ▶ Reboot your system.



## 4.6 PXI Trigger Driver

The PXI-3920/3910 controller provides a trigger I/O on the faceplate to route trigger signals to/from the PXI trigger bus. You need to install the trigger I/O driver to control the trigger route. Please follow the following steps to install PXI Trigger drivers for PXI-3920/3910 (for information on programming the PXI Trigger, please refer to Appendix A).

- ▶ Close any running application.
- ▶ Insert the ADLINK All-in-One CD. The PXI trigger driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI
  controller\PXI-
  3910_20\PXI_Trigger\2000_XP_Vista\, where
  x: denotes the CD-ROM drive.
```

- ▶ Execute Setup.exe and follow on-screen instructions to complete the setup.
- ▶ Reboot your system.

## 4.7 WDT Driver

WDT (watchdog timer) is a hardware mechanism to reset the system when the operating system or application is halted. A typical usage of WDT is to start the timers and periodically reset the timer, and when timer is expired, the system resets. You need to install the WDT driver to program the WDT. Please follow the following steps to install GPIB driver for PXI-3920/3910 (for information on programming the watchdog timer, please refer to Appendix B).

- ▶ Close any running application.
- ▶ Insert the ADLINK All-in-One CD. The PXI trigger driver is located in the directory:

```
x:\Driver Installation\PXI Platform\PXI
  controller\PXI-3910_20\WDT\2000_XP_Vista\,
  where x: denotes the CD-ROM drive.
```

- ▶ Execute Setup.exe and follow on-screen instructions to complete the setup.
- ▶ Reboot your system.

This page intentionally left blank.

# Appendix A: PXI Trigger I/O Function Reference

This appendix describes the usage of the PXI trigger I/O function library for PXI-3920/3910 controllers. Users can use the function library to program the routing of the trigger signal between the trigger I/O SMB connector on the faceplate and the PXI trigger bus on the backplane.

## A.1 Data Types

We define several data types for PXI trigger I/O functions. The defined data types can be found in `pxitrigio.h` in the directory `X:\ADLINK\PXI Trigger IO\Include\` after running the `setup.exe` file (where X is the drive you install the trigger I/O driver). These data types are used by the PXI trigger I/O function Library. It is recommended that you use these data types in your application programs. The following table lists the data type names, their ranges, and the corresponding data types in C/C++, Visual Basic and Delphi.

Type	Description	Range	Type in programming language		
			C/C++	VB	Delphi
U8	8-bit ASCII character	0 to 255	unsigned char	Byte	Byte
I16	16-bit signed integer	-32768 to 32767	short	Integer	SmallInt
U16	16-bit unsigned integer	0 to 65535	unsigned short	Not supported in VB, use Integer instead	Word
I32	32-bit signed integer	-2147483648 to 2147483647	long	Long	LongInt
U32	32-bit unsigned integer	0 to 4294967295	unsigned long	Not supported in VB, use Long instead	Cardinal
F32	32-bit single-precision floating-point	3.402823E38 to 3.402823E38	float	Single	Single
F64	64-bit double-precision floating-point	1.797683134862315E308 to 1.797683134862315E309	double	Double	Double

## A.2 Function

### TRIG\_Init

#### @ Description

Initializes the trigger I/O function of the PXI-3920/3910 controller. TRIG\_Init must be called before the invocation of any other trigger I/O function. TRIG\_Init does not reset the current trigger routing.

#### @ Supported controllers

PXI-3920, PXI-3910, PXI-3800

#### @ Syntax

C/C++

```
I16 TRIG_Init()
```

Visual Basic

```
TRIG_Init As Integer
```

#### @ Parameters

None

#### @ Return Codes

```
ERR_NoError  
ERR_BoardBusy  
ERR_OpenDriverFail  
ERR_GetGPIOAddress
```

## TRIG\_Close

### @ Description

Closes the trigger I/O function of PXI-3920/3910 controller. This function releases the resources allocated for the trigger I/O function. Users must invoke TRIG\_Close before exiting the application.

### @ Supported controllers

PXI-3920, PXI-3910, PXI-3800

### @ Syntax

C/C++

```
I16 TRIG_Close()
```

Visual Basic

```
TRIG_Close() As Integer
```

### @ Parameters

None

### @ Return Codes

```
ERR_NoError  
ERR_BoardNoInit
```

## TRIG\_SetSoftTrg

### @ Description

Generates a TTL trigger signal to the trigger I/O SMB connector on the faceplate or the PXI trigger bus on the backplane via software command.

### @ Supported controllers

PXI-3920, PXI-3910, PXI-3800

### @ Syntax

C/C++

```
I16 TRIG_SetSoftTrg(U8 Status)
```

Visual Basic

```
TRIG_SetSoftTrg (ByVal status As Byte) As Integer
```

### @ Parameters

Status

### Trigger Signal Logic Level

Available value	Description
0	Logic low
1	Logic high

### @ Return Codes

```
ERR_NoError  
ERR_BoardNoInit
```

## TRIG\_Trigger\_Route

### @ Description

Routes the trigger signal between the trigger I/O SMB connector on the faceplate and the PXI trigger bus on the backplane. This function also allows routing the software-generated trigger signal to SMB connector or trigger bus.

### @ Supported controllers

PXI-3920, PXI-3910, PXI-3800

### @ Syntax

C/C++

```
I16 TRIG_Trigger_Route (U32 source, U32 dest, U32
    halfway)
```

### Visual Basic

```
TRIG_Trigger_Route (ByVal source As Long, ByVal
    dest As Long, ByVal halfway As Long) As
    Integer
```

### @ Parameters

source

### Source Trigger Routing

Available value	Description
PXI_TRIG_VAL_SMB	SMB connector on the faceplate
PXI_TRIG_VAL_SOFT	Software-generated trigger signal
PXI_TRIG_VAL_TRIG0	PXI trigger bus #0
PXI_TRIG_VAL_TRIG1	PXI trigger bus #1
PXI_TRIG_VAL_TRIG2	PXI trigger bus #2
PXI_TRIG_VAL_TRIG3	PXI trigger bus #3
PXI_TRIG_VAL_TRIG4	PXI trigger bus #4
PXI_TRIG_VAL_TRIG5	PXI trigger bus #5
PXI_TRIG_VAL_TRIG6	PXI trigger bus #6
PXI_TRIG_VAL_TRIG7	PXI trigger bus #7

dest

### Destination Trigger Routing.

Available value	Description
PXI_TRIG_VAL_SMB	SMB connector on the faceplate
PXI_TRIG_VAL_TRIG0	PXI trigger bus #0
PXI_TRIG_VAL_TRIG1	PXI trigger bus #1
PXI_TRIG_VAL_TRIG2	PXI trigger bus #2
PXI_TRIG_VAL_TRIG3	PXI trigger bus #3
PXI_TRIG_VAL_TRIG4	PXI trigger bus #4
PXI_TRIG_VAL_TRIG5	PXI trigger bus #5
PXI_TRIG_VAL_TRIG6	PXI trigger bus #6
PXI_TRIG_VAL_TRIG7	PXI trigger bus #7

halfway

Halfway Point Trigger Routing. This parameter is used only when users want to route the software-generated trigger signal to the SMB connector on the faceplate. In this case, users should set the halfway as one of the trigger bus lines. Otherwise set the halfway as `PXI_TRIG_VAL_NONE`.

Available value	Description
PXI_TRIG_VAL_NONE	No halfway point
PXI_TRIG_VAL_TRIG0	PXI trigger bus #0
PXI_TRIG_VAL_TRIG1	PXI trigger bus #1
PXI_TRIG_VAL_TRIG2	PXI trigger bus #2
PXI_TRIG_VAL_TRIG3	PXI trigger bus #3
PXI_TRIG_VAL_TRIG4	PXI trigger bus #4
PXI_TRIG_VAL_TRIG5	PXI trigger bus #5
PXI_TRIG_VAL_TRIG6	PXI trigger bus #6
PXI_TRIG_VAL_TRIG7	PXI trigger bus #7

### @ Return Codes

`ERR_NoError`  
`ERR_BoardNoInit`  
`ERR_Set_Path`



## **TRIG\_Trigger\_Clear**

### **@ Description**

Clears the trigger routing settings.

### **@ Supported controllers**

PXI-3920, PXI-3910, PXI-3800

### **@ Syntax**

C/C++

```
I16 TRIG_Trigger_Clear()
```

Visual Basic

```
TRIG_Trigger_Clear() As Integer
```

### **@ Parameters**

None

### **@ Return Codes**

```
ERR_NoError  
ERR_BoardNoInit  
ERR_Trigger_Clr
```

This page intentionally left blank.

## Appendix B: Watchdog Timer Function Reference

This appendix describes the usage of the watchdog timer (WDT) function library for the PXI-3920/3910 controller. Watchdog timer is a hardware mechanism to reset the system in case the operating system or an application halts. After starting watchdog timer, you need to periodically reset the watchdog timer in the application before the timer expires. Once watchdog timer expires, a hardware-generated signal is sent to reset the system.

## B.1 Function

### InitWDT

#### @ Description

Initializes the watchdog timer function of PXI-3920/3910 controllers. InitWDT must be called before the invocation of any other WDT function.

#### @ Supported controllers

PXI-3920, PXI-3910

#### @ Syntax

##### C/C++

```
BOOL InitWDT()
```

##### Visual Basic

```
InitWDT() As Boolean
```

#### @ Parameters

None

#### @ Return Codes

TRUE if watchdog timer is successfully initialized.

FALSE if watchdog timer is failed to initialize.

## SetWDT

### @ Description

Sets the timeout value of watchdog timer. The timeout value should be given in seconds. Users should call ResetWDT or StopWDT before the expiration of the watchdog timer, or the system will be reset.

### @ Supported controllers

PXI-3920, PXI-3910

### @ Syntax

C/C++

```
BOOL SetWDT(unsigned long second)
```

### Visual Basic

```
InitWDT(ByVal second as Long) As Boolean
```

### @ Parameters

*second*

Specifies the timeout value of the watchdog timer.

Value	Description
0 to 255	If the value of <i>second</i> parameter is between 0 to 255, the resolution of watchdog timer is 1 second.
> 255	If the value of <i>second</i> parameter is larger than 255, the resolution of watchdog timer is 1 minute. That is, if users give a value of 400, the actual timeout value is $400/60 + 1 = 7$ minutes.

### @ Return Codes

TRUE if timeout value of watchdog timer is successfully set.

FALSE if timeout value of watchdog timer is failed to set.

## StartWDT

### @ Description

Starts the watchdog timer function. Once the StartWDT is invoked, the watchdog timer countdown starts. Users should call ResetWDT or StopWDT before the expiration of the watchdog timer, or the system will be reset.

### @ Supported Controllers

PXI-3920, PXI-3910

### @ Syntax

#### C/C++

```
BOOL StartWDT()
```

#### Visual Basic

```
StartWDT() As Boolean
```

### @ Parameters

None

### @ Return Codes

```
TRUE if watchdog timer is successfully started.  
FALSE if watchdog timer is failed to start.
```

## ResetWDT

### @ Description

Resets the watchdog timer. The invocation of ResetWDT allows users to restore the watchdog timer to the initial timeout value specified in the SetWDT function. Users should call ResetWDT or StopWDT before the expiration of the watchdog timer, or the system will be reset.

### @ Supported Controllers

PXI-3920, PXI-3910

### @ Syntax

C/C++

```
BOOL ResetWDT()
```

Visual Basic

```
ResetWDT() As Boolean
```

### @ Parameters

None

### @ Return Codes

```
TRUE if watchdog timer is successfully reset.  
FALSE if watchdog timer is failed to reset.
```

## StopWDT

### @ Description

Stops the watchdog timer.

### @ Supported Controllers

PXI-3920, PXI-3910

### @ Syntax

#### C/C++

```
BOOL StopWDT()
```

#### Visual Basic

```
StopWDT() As Boolean
```

### @ Parameters

None

### @ Return Codes

TRUE if watchdog timer is successfully stopped.  
FALSE if watchdog timer is failed to stop.



# Important Safety Instructions

For user safety, please read and follow all **instructions**, **WARNINGS**, **CAUTIONS**, and **NOTES** marked in this manual and on the associated equipment before handling/operating the equipment.

- ▶ Read these safety instructions carefully.
- ▶ Keep this user's manual for future reference.
- ▶ Read the specifications section of this manual for detailed information on the operating environment of this equipment.
- ▶ When installing/mounting or uninstalling/removing equipment:
  - ▷ Turn off power and unplug any power cords/cables.
- ▶ To avoid electrical shock and/or damage to equipment:
  - ▷ Keep equipment away from water or liquid sources;
  - ▷ Keep equipment away from high heat or high humidity;
  - ▷ Keep equipment properly ventilated (do not block or cover ventilation openings);
  - ▷ Make sure to use recommended voltage and power source settings;
  - ▷ Always install and operate equipment near an easily accessible electrical socket-outlet;
  - ▷ Secure the power cord (do not place any object on/over the power cord);
  - ▷ Only install/attach and operate equipment on stable surfaces and/or recommended mountings; and,
  - ▷ If the equipment will not be used for long periods of time, turn off and unplug the equipment from its power source.

- ▶ Never attempt to fix the equipment. Equipment should only be serviced by qualified personnel.
- ▶ A Lithium-type battery may be provided for uninterrupted, backup or emergency power.



***RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THEIR INSTRUCTIONS.***

- 
- ▶ Equipment must be serviced by authorized technicians when:
    - ▷ The power cord or plug is damaged;
    - ▷ Liquid has penetrated the equipment;
    - ▷ It has been exposed to high humidity/moisture;
    - ▷ It is not functioning or does not function according to the user's manual;
    - ▷ It has been dropped and/or damaged; and/or,
    - ▷ It has an obvious sign of breakage.

# Warranty Policy

Thank you for choosing ADLINK. To understand your rights and enjoy all the after-sales services we offer, please read the following carefully.

1. Before using ADLINK's products please read the user manual and follow the instructions exactly. When sending in damaged products for repair, please attach an RMA application form which can be downloaded from: <http://rma.adlinktech.com/policy/>
  
2. All ADLINK products come with a limited two-year warranty, one year for products bought in China:
  - ▶ The warranty period starts on the day the product is shipped from ADLINK's factory.
  - ▶ Peripherals and third-party products not manufactured by ADLINK will be covered by the original manufacturers' warranty.
  - ▶ For products containing storage devices (hard drives, flash cards, etc.), please back up your data before sending them for repair. ADLINK is not responsible for any loss of data.
  - ▶ Please ensure the use of properly licensed software with our systems. ADLINK does not condone the use of pirated software and will not service systems using such software. ADLINK will not be held legally responsible for products shipped with unlicensed software installed by the user.
  - ▶ For general repairs, please do not include peripheral accessories. If peripherals need to be included, be certain to specify which items you sent on the RMA Request & Confirmation Form. ADLINK is not responsible for items not listed on the RMA Request & Confirmation Form.

3. Repair service is not covered by ADLINK's two-year guarantee in the following situations:
  - ▶ Damage caused by not following instructions in the User's Manual.
  - ▶ Damage caused by carelessness on the user's part during product transportation.
  - ▶ Damage caused by fire, earthquakes, floods, lightening, pollution, other acts of God, and/or incorrect usage of voltage transformers.
  - ▶ Damage caused by inappropriate storage environments such as high temperatures, high humidity, or volatile chemicals.
  - ▶ Damage caused by leakage of battery fluid during or after change of batteries by customer/user.
  - ▶ Damage from improper repair by unauthorized technicians.
  - ▶ Products with altered and/or damaged serial numbers are not entitled to our service.
  - ▶ This warranty is not transferable or extendable.
  - ▶ Other categories not protected under our warranty.
  
4. Customers are responsible for all fees necessary to transport damaged products to ADLINK.
  
5. To ensure the speed and quality of product repair, please download an RMA application form from our company website: <http://rma.adlinktech.com/policy/>  
Products with attached RMA forms receive priority.

For further questions, please e-mail our FAE staff:  
[service@adlinktech.com](mailto:service@adlinktech.com).